

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
-----------	----------	------	-----------	----------	------

# ALPHABETICAL INDEX

## A

Absorber, shock . . . . .	17-18	17-23-3
	to	to
	17-21	17-23-56
Accelerator pedal . . . . .	16-6	14-01-1
		to
		14-01-18
Accelerator pedal rod . . . . .	14-6	14-07-1
Accelerator shaft . . . . .	14-6,	14-11-1
	14-7	to
		14-11-28
Adapter, speedometer . . . . .	21-47,	21-86-5
	21-48	to
		21-86-53
Adjuster, hand brake . . . . .	4-7,	4-07-1
	4-8	to
		4-07-28
Adjuster, wheel brake . . . . .	5-25	5-20-1
Air brake air pressure governor tube . . . . .	5-49	5-123-2
Air brake compressor . . . . .	5-47	5-114-6
		to
		5-114-10
Air brake control valve . . . . .	5-47	5-115-2
		to
		5-115-13
Air brake control valve tube . . . . .	5-47,	5-116-3
	5-48	to
		5-116-25
Air brake pressure gauge tube . . . . .	5-48	5-118-5
Air brake réservoir . . . . .	5-48	5-119-4
		to
		5-119-15
Air compressor tube . . . . .	5-48,	5-120-1
	5-49	to
		5-120-27
Anchor, brake shoe . . . . .	5-24,	5-19-1
	5-25	to
		5-19-21
Anchor, hand brake . . . . .	4-7	4-06-1
		to
		4-06-20
Anti-squeak, body . . . . .	23-29	23-31-6
		to
		23-31-119
Anti-squeak, front fender . . . . .	12-3,	12-02-5
	12-4	to
		12-02-15
Anti-squeak, hood . . . . .	15-4	15-09-4
		to
		15-09-15
Anti-squeak, rear fender . . . . .	12-9	12-20-4
		to
		12-20-8
Arm, door check . . . . .	23-23,	23-10-1
	23-24	to
		23-10-17
Arm, fuel pump rocker . . . . .	14-23	14-79-1
		to
		14-79-20
Arm, steering gear . . . . .	19-13,	19-27-2
	19-14	to
		19-27-36

## B

Arm, steering knuckle . . . . .	2-13	2-05-4
	to	to
	2-16	2-05-14
Ash receiver . . . . .	1-10	1-18-2
		to
		1-18-10
	23-19	23-02-3
		to
		23-02-50
Auto pulse fuel pump . . . . .	14-24	14-84-1
		to
		14-84-23
<b>B</b>		
Ball, carburetor lead . . . . .	14-14,	14-37-2
	14-15	to
		14-37-42
Band and lining, hand brake . . . . .	4-5,	4-03-1
	4-6	to
		4-03-11
Battery cable . . . . .	8-13	8-01-3
		to
		8-01-21
Battery cover . . . . .	23-19	23-03-2
Battery hold-down cover . . . . .	13-8	13-34-3
		to
		13-34-6
Battery support and plate . . . . .	13-7,	13-33-1
	13-8	to
		13-33-64
Bearing, camshaft . . . . .	9-13	9-16-6
Bearing, clutch release . . . . .	6-9	6-19-2
		to
		6-19-3
Bearing, countershaft (3 speed) . . . . .	21-16	21-25-2
		to
		21-25-4
	(4 speed) . . . . .	21-24,
		21-25
		to
		21-25-4
	(5 speed) . . . . .	21-36,
		21-37
		to
		21-25-4
Bearing, countershaft front (5 speed) . . . . .	21-38,	21-26-3
	21-39	to
		21-26-11
Bearing, countershaft rear (4 speed) . . . . .	21-24,	21-27-2
	21-25	to
		21-27-3
	(5 speed) . . . . .	21-38,
		21-39
		to
		21-27-21
Bearing, crankshaft . . . . .	9-9	9-09-2
	to	
	9-11	
Bearing, differential . . . . .	3-31	3-11-1
	to	to
	3-33	3-11-17

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Bearing, differential spiral pinion or shaft . . . . .	3-34	3-13-1	Body, fuel pump . . . . .	14-22	14-75-1
	to	to			to
	3-36	3-13-14			14-75-4
Bearing, drive pinion . . . . .	3-46	3-22-7	Body, water pump . . . . .	7-17,	7-43-1
	to	to		7-18	to
	3-57	3-22-103			7-43-17
Bearing, drive shaft . . . . .	3-63	3-33-1	Body anti-squeak . . . . .	23-29	23-31-6
		to			to
		3-33-24			23-31-119
Bearing, front wheel . . . . .	22-16	22-06-1	Body bumper . . . . .	23-22,	23-08-12
	to	to		23-23	to
	22-19	22-06-20			23-08-70
Bearing, main drive (5 speed) . . . . .	21-32,	21-09-2	Body clip . . . . .	23-45	23-115-6
	21-33	to			to
		21-09-36			23-115-8
Bearing, main shaft pilot (3 speed) . .	21-16	21-17-2	Body dovetail . . . . .	23-22,	23-08-12
		to		23-23	23-08-70
		21-17-7	Body fastener . . . . .	23-45	23-115-6
(4 speed) . .	21-22,	21-17-2			to
	21-23	to			23-115-8
		21-17-9	Body filler . . . . .	23-44,	23-113-12
(5 speed) . .	21-36,	21-17-2		23-45	to
	21-37	to			23-113-74
		21-17-9	Body hold-down bolt . . . . .	23-21,	23-05-1
Bearing, main shaft rear (3 speed) . .	21-16	21-19-2		23-22	to
		to			23-05-14
		21-19-9		23-46	23-05-1
(4 speed) . .	21-22,	21-19-2			to
	21-23	to		23-48,	23-05-1
		21-19-15		23-49	to
(5 speed) . .	21-36,	21-19-2			23-05-4
	21-37	to	Body insulator . . . . .	23-29	23-31-6
		21-19-9			to
Bearing, propeller shaft center . . . .	16-22	16-16-1			23-31-119
	to	to		23-46	23-31-32
	16-25	16-16-48			to
Bearing, rear wheel . . . . .	22-19	22-07-1	Body liner . . . . .	23-29	23-31-53
	to	to			23-31-6
	22-21	22-07-27			to
Belt, fan and generator . . . . .	7-7	7-03-1			23-31-119
Bleeder, wheel cylinder . . . . .	5-36	5-67-1	Body pad . . . . .	23-29	23-31-6
Block, cylinder . . . . .	9-6,	9-02-5			to
	9-7	to			23-31-119
		9-02-35		23-46	23-31-32
Block, headlamp cable terminal . . . .	8-16	8-21-1			to
		to			23-31-53
		8-21-11	Body rail . . . . .	23-49	23-51-59
Board, floor . . . . .	23-19	23-04-4	Body reinforcement . . . . .	23-22	23-07-30
	to	to			to
	23-21	23-04-224			23-07-58
	23-46	23-04-205	Body seal . . . . .	23-29	23-31-6
		to			to
		23-04-206			23-31-119
Board, running . . . . .	12-9	12-26-2	Body sill . . . . .	23-33	23-51-5
	to	to			to
	12-11	12-26-66			23-51-7
Board, toe . . . . .	23-19	23-04-4		23-49	23-51-59
	to	to	Body striker . . . . .	23-22,	23-08-12
	23-21	23-04-224		23-23	to
	23-46	23-04-205			23-08-70
		to	Body support . . . . .	23-46	23-07-332
		23-04-206			to
Body, carburetor main . . . . .	14-18	14-49-1			23-07-342
Body, carburetor throttle . . . . .	14-12	14-33-1	Body welt . . . . .	23-44,	23-113-12
		to		23-45	to
		14-33-5			23-113-74

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Body and valve, carburetor throttle . .	14-15	14-38-4 to 14-38-21	Bracket, absorber shock . . . . .	17-21 to 17-25	17-24-3 to 17-24-10
Bolt, body hold-down . . . . .	23-21, 23-22	23-05-1 to 23-05-14 23-05-1	Bracket, booster cylinder mounting .	5-43, 5-44	5-101-1
Bolt, drive gear . . . . .	3-44 to 3-46	3-20-1 to 3-20-19	Bracket, brake pedal . . . . .	5-28	5-31-15
Bolt, front spring . . . . .	17-6	17-04-1 to 17-04-9	Bracket, brake pedal reinforcement .	5-28	5-36-1 to 5-36-3
Bolt, hold-down body . . . . .	23-48, 23-49	23-05-1 to 23-05-4	Bracket, brake pedal stop . . . . .	5-27	5-30-9
Bolt, rear spring . . . . .	17-13, 17-14	17-14-1 to 17-14-10	Bracket, brake tube hose frame . . . .	5-33	5-57-2
Bolt and nut clutch pressure plate eye .	6-9	6-18-1	Bracket, cab support or cab hold-down cover . . . . .	13-8, 13-9	13-39-26 to 13-39-49
Booster brake check valve . . . . .	5-45	5-105-1 to 5-105-4	Bracket, engine rear support . . . . .	9-30	9-70-4 to 9-70-9
Booster brake cylinder . . . . .	5-41 to 5-43	5-100-1 to 5-100-85	Bracket, front fender . . . . .	12-6	12-06-3 to 12-06-20
Booster brake hose . . . . .	5-46	5-111-6	Bracket, front fender housing . . . . .	12-6	12-06-3 to 12-06-20
Booster brake hose clamp . . . . .	5-46	5-112-1	Bracket, front fender support . . . . .	12-5	12-05-15
Booster brake tube . . . . .	5-45, 5-46	5-107-1 to 5-107-19	Bracket, front spring . . . . .	13-10	13-53-3 to 13-53-22
Booster brake tube clip . . . . .	5-46	5-109-1	Bracket, hand brake . . . . .	4-7	4-06-1 to 4-06-20
Booster brake tube elbow . . . . .	5-46	5-108-5 to 5-108-13	Bracket, license mounting . . . . .	8-36	8-47-8 to 8-47-75
Booster brake tube tee . . . . .	5-46	5-110-13 to 5-110-15	Bracket, rear fender . . . . .	12-9	12-21-1
Booster brake vacuum supply tank . . .	5-44	5-102-2 to 5-102-6	Bracket, rear spring . . . . .	13-10, 13-11	13-54-4 to 13-54-15
Booster breather air cleaner . . . . .	5-47	5-113-5 to 5-113-14	Bracket, steering gear . . . . .	19-8, 19-9	19-12-1 to 19-12-13
Booster cylinder mounting bracket . . .	5-43, 5-44	5-101-1	Bracket, steering post . . . . .	19-15	19-31-1 to 19-31-38
Booster cylinder vacuum valve . . . . .	5-44, 5-45	5-103-3 to 5-103-34	Bracket, tail pipe . . . . .	11-5	11-10-3
Boot, master cylinder . . . . .	5-29	5-40-1 to 5-40-2	Bracket, throttle control wire tube . .	14-9	14-26-1 to 14-26-2
Boot, wheel cylinder . . . . .	5-36	5-69-1	Bracket and support, muffler . . . . .	11-2	11-02-4 to 11-02-49
Bow, roof . . . . .	23-31	23-40-25 to 23-40-31	Brake cam shaft . . . . .	5-40, 5-41	5-97-1 to 5-97-35
Box, glove . . . . .	23-22	23-06-4 to 23-06-89	Brake flexible hose . . . . .	5-33	5-62-1 to 5-62-17
Brace, front fender housing . . . . .	12-6	12-07-1 to 12-07-4	Brake fluid, super . . . . .	5-16	5-01-2
Brace, radiator guard . . . . .	7-19	7-51-2	Brake holder . . . . .	1-14	1-43-1 to 1-43-23
			Brake holder control switch . . . . .	1-14	1-43-3
			Brake holder solenoid switch . . . . .	1-14	1-43-15
			Brake operating lever . . . . .	5-39, 5-40	5-76-1 to 5-76-6
			Brake operating lever rod . . . . .	5-40	5-77-1

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Brake pedal and bushing . . . . .	5-26, 5-27	5-27-1 to 5-27-28	Bumper, rear . . . . .	13-12	13-66-3 to 13-66-66
Brake pedal bracket . . . . .	5-28	5-31-15	Bumper, rear spring . . . . .	17-16	17-19-3 to 17-19-4
Brake pedal pad . . . . .	5-27	5-28-1 to 5-28-8	Bushing and pedal, bushing. . . . .	17-18 5-26, 5-27	5-27-1 to 5-27-28
Brake pedal pull-back spring . . . . .	5-28	5-34-1 to 5-34-7	Bushing and roller, universal joint cross . . . . .	16-20	16-10-1 to 16-10-7
Brake pedal reinforcement bracket . . .	5-28	5-36-1 to 5-36-3	Bushing and spring, front . . . . .	17-6	17-01-2 to 17-01-17
Brake pedal reinforcement support . . .	5-28	5-36-1 to 5-36-3	Bushing and spring, rear. . . . .	17-10 17-13	17-11-1 to 17-11-35
Brake pedal shaft . . . . .	5-27	5-29-1 to 5-29-4	Button, hand brake lever . . . . .	4-9	4-14-1 to 4-14-27
Brake pedal stop bracket . . . . .	5-27	5-30-9	Button and wire, throttle control . . .	14-9	14-24-2 to 14-24-11
Brake shoe adjusting cam . . . . .	5-25, 5-26	5-22-1 to 5-22-4	<b>C</b>		
Brake shoe adjusting pin . . . . .	5-25	5-21-2	Cab heat shield . . . . .	12-11	12-37-2 to 12-37-4
Brake shoe anchor . . . . .	5-24, 5-25	5-19-1 to 5-19-21	Cab support dust shield . . . . .	12-11	12-34-2 to 12-34-4
Brake shoe and facing . . . . .	5-16 to 5-20	5-03-1 to 5-03-33	Cab support or cab hold-down bracket .	13-8, 13-9	13-39-26 to 13-39-49
Brake shoe guide . . . . .	5-26	5-25-1 to 5-25-5	Cable, battery . . . . .	8-13	8-01-3 to 8-01-21
Brake shoe guide spring . . . . .	5-26	5-26-1 to 5-26-4	Cable, dome lamp . . . . .	8-13	8-06-2 to 8-06-5
Brake shoe lever . . . . .	5-20	5-04-1	Cable, hand brake control . . . . .	4-11	4-23-1 to 4-23-28
Brake shoe pressure plate . . . . .	5-20	5-09-3	Cable, speedometer . . . . .	21-44	21-84-1 to 21-84-15
Brake shoe push rod . . . . .	5-20, 5-21	5-12-1 to 5-12-6	Cable and connection, chassis wiring .	8-14, 8-15	8-16-2 to 8-16-8
Brake support . . . . .	5-21, 5-22	5-13-1 to 5-13-30	Cage, differential spiral pinion or shaft bearing. . . . .	3-36 to 3-38	3-14-1 to 3-14-7
Brake support shield . . . . .	5-22, 5-23	5-16-1 to 5-16-5	Cage, drive pinion bearing. . . . .	3-57, 3-58	3-23-1 to 3-23-15
Brake tube clip . . . . .	5-32	5-56-2	Cam, brake shoe adjusting. . . . .	5-25, 5-26	5-22-1 to 5-22-4
Brake tube hose frame bracket . . . . .	5-33	5-57-2	Camshaft . . . . .	9-12, 9-13	9-15-1 to 9-15-6
Brake tube tie . . . . .	5-33	5-58-1 to 5-58-3			
Breather, crankcase . . . . .	10-4, 10-5	10-01-9 to 10-01-44			
Bulb, lamp . . . . .	8-36	8-44-1			
Bumper, body . . . . .	23-22, 23-23	23-08-12 to 23-08-70			
Bumper, front. . . . .	13-11, 13-12	13-64-3 to 13-64-20			
Bumper, front spring . . . . .	17-8	17-08-3			
Bumper, hood . . . . .	15-4	15-09-4 to 15-09-15			

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Camshaft bearing . . . . .	9-13	9-16-6	Carburetor screw . . . . .	14-18, 14-19	14-54-3 to 14-54-130
Camshaft gear . . . . .	9-13	9-17-5 to 9-17-20	Carburetor spring . . . . .	14-13, 14-14	14-36-1 to 14-36-29
Camshaft gear or sprocket oil tube. . .	9-13, 9-14	9-19-3	Carburetor step-up . . . . .	14-17	14-43-1 to 14-43-4
Camshaft sprocket . . . . .	9-13	9-17-5 to 9-17-20	Carburetor stud . . . . .	14-18, 14-19	14-54-3 to 14-54-130
Cap, crankshaft bearing . . . . .	9-11, 9-12	9-10-5 to 9-10-27	Carburetor throttle body . . . . .	14-12	14-33-1 to 14-33-5
Cap, fuel tank locking . . . . .	1-13, 1-14	1-39-2 to 1-39-5	Carburetor throttle body and valve . . .	14-15	14-38-4 to 14-38-21
Cap, hub . . . . .	22-21	22-08-5 to 22-08-57	Carburetor tube . . . . .	14-17	14-44-1 to 14-44-5
Cap, radiator filler . . . . .	7-9	7-12-1 to 7-12-4	Carburetor vacuum economizer . . . . .	14-18	14-46-1
Carburetor . . . . .	14-10, 14-11	14-30-1 to 14-30-6	Carburetor washer . . . . .	14-18, 14-19	14-54-3 to 14-54-130
Carburetor air cleaner . . . . .	14-9, 14-10	14-29-2 to 14-29-42	Case, differential . . . . .	3-26, 3-27	3-04-6 to 3-04-11
Carburetor air horn . . . . .	14-18	14-47-1 to 14-47-3	Case extension (4 speed) . . . . .	21-18, 21-19	21-04-1 to 21-04-13
Carburetor attaching stud . . . . .	14-11	14-31-3 to 14-31-5	Case transmission (3 speed) . . . . .	21-15	21-03-1
Carburetor body flange . . . . .	14-12	14-33-1 to 14-33-5	(4 speed) . . . . .	21-18, 21-19	21-03-1 to 21-03-25
Carburetor choke . . . . .	14-15, 14-16	14-39-1 to 14-39-32	(5 speed) . . . . .	21-30, 21-31	21-03-1 to 21-03-15
Carburetor dash pot . . . . .	14-18	14-50-1 to 14-50-11	Carrier, tire . . . . .	22-24, 22-25	22-19-1 to 22-19-29
Carburetor float . . . . .	14-16	14-40-1 to 14-40-7	Carrier, underslung tire . . . . .	22-23, 22-24	22-12-1 to 22-12-131
Carburetor gasket . . . . .	14-12, 14-13	14-34-2 to 14-34-37	Carrier and differential . . . . .	3-19 to 3-26	3-03-1 to 3-03-54
Carburetor idling parts . . . . .	14-18	14-45-1	Catch, hood lock . . . . .	15-5	15-15-1 to 15-15-7
Carburetor jet . . . . .	14-13	14-35-1 to 14-35-8	Center window screen . . . . .	23-31	23-43-20
Carburetor lead ball . . . . .	14-14, 14-15	14-37-2 to 14-37-42	Chain, timing . . . . .	9-14	9-20-1
Carburetor main body . . . . .	14-18	14-49-1	Chain case cover . . . . .	9-14, 9-15	9-23-1 to 9-23-40
Carburetor nozzle . . . . .	14-12	14-32-1	Chain case cover plate . . . . .	9-15	9-24-5 to 9-24-13
Carburetor nut . . . . .	14-18, 14-19	14-54-3 to 14-54-130	Channel, front door glass . . . . .	23-23	23-09-18 to 23-09-52
Carburetor plug . . . . .	14-14, 14-15	14-37-2 to 14-37-42	Chart, rear spring identification . . .	17-8, 17-9	-----
Carburetor pump . . . . .	14-16, 14-17	14-41-3 to 14-41-40	Chassis and body wiring . . . . .	8-13, 8-14	8-15-2 to 8-15-32
Carburetor pump piston . . . . .	14-17	14-42-3	Chassis wiring cable and connection . .	8-14, 8-15	8-16-2 to 8-16-8

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Choke, carburetor . . . . .	14-15, 14-16	14-39-1 to 14-39-32	Clutch pedal adjusting collar . . . . .	6-11	6-45-1 to 6-45-3
Choke control . . . . .	14-19, 14-20	14-63-1 14-63-63 to	Clutch pedal adjusting screw . . . . .	6-11	6-45-1 to 6-45-3
Cigar lighter . . . . .	1-10	1-12-1 to 1-12-41	Clutch pedal pad . . . . .	6-11	6-39-2 to 6-39-3
Clamp, booster brake hose . . . . .	5-46	5-112-1	Clutch pedal shaft . . . . .	6-11	6-43-1 to 6-43-11
Clamp, muffler exhaust pipe . . . . .	11-3, 11-4	11-08-1 to 11-08-19	Clutch plate . . . . .	3-65	3-48-14 to 3-48-16
Clamp and pipe, muffler tail . . . . .	11-4	11-09-1 to 11-09-3	Clutch pressure plate . . . . .	6-8	6-15-1
Cleaner, booster breather air . . . . .	5-47	5-113-5 to 5-113-14	Clutch pressure plate eye bolt and nut . . . . .	6-9	6-18-1
Cleaner, carburetor air . . . . .	14-9, 14-10	14-29-2 to 14-29-42	Clutch pressure spring . . . . .	6-8, 6-9	6-16-1
Clip, body . . . . .	23-45	23-115-6 to 23-115-8	Clutch release bearing . . . . .	6-9	6-19-2 to 6-19-3
Clip, booster brake tube . . . . .	5-46	5-109-1	Clutch release bearing sleeve . . . . .	6-9	6-20-2 to 6-20-17
Clip, brake tube . . . . .	5-32	5-56-2	Clutch release fork . . . . .	6-9, 6-10	6-22-1 to 6-22-30
Clip, front spring . . . . .	17-6	17-05-1 to 17-05-6	Clutch release fork flange . . . . .	6-10	6-26-1 to 6-26-14
Clip, rear spring . . . . .	17-14	17-15-1 to 17-15-6	Clutch release fork lever . . . . .	6-10	6-27-2 to 6-27-12
Clips and union, fuel tube . . . . .	14-33	14-90-1 to 14-90-20	Clutch release lever . . . . .	6-9	6-17-1 to 6-17-11
Clutch cover and pressure plate . . . . .	6-8	6-14-1 to 6-14-16	Clutch release shaft . . . . .	6-11	6-43-1 to 6-43-11
Clutch disc . . . . .	6-7	6-13-1 to 6-13-8	Clutch release yoke . . . . .	6-9, 6-10	6-22-1 to 6-22-30
Clutch gear and sleeve (3 speed) . . . . .	21-15	21-14-2 to 21-14-21	Coil and switch, ignition . . . . .	8-32, 8-33	8-35-4 to 8-35-122
(4 speed) . . . . .	21-20, 21-21	21-14-1 21-14-20	Collar, clutch pedal adjusting . . . . .	6-11	6-45-1 to 6-45-3
(5 speed) . . . . .	21-34, 21-35	21-14-5 to 21-14-20	Component parts, generator . . . . .	8-25 to 8-30	8-29-1 to 8-29-327
Clutch housing . . . . .	6-5, 6-6	6-09-1 6-09-10	Component parts, shock absorber . . . . .	17-26, 17-27	17-26-2 to 17-26-75
Clutch housing cover . . . . .	6-6, 6-7	6-10-2 6-10-18	Compressor, air brake . . . . .	5-47	5-114-6 to 5-114-10
Clutch housing pan . . . . .	6-6, 6-7	6-10-2 6-10-18	Connecting rod . . . . .	9-15, 9-16	9-31-4 to 9-31-10
Clutch housing vent screen . . . . .	6-7	6-11-2 to 6-11-6	Connecting rod bearing package . . . . .	9-16, 9-17	9-32-2
Clutch operating lever . . . . .	6-11	6-48-1 to 6-48-25	Connection, master cylinder . . . . .	5-29	5-41-5
Clutch operating rod . . . . .	6-11	6-50-1	Connection, rear wheel cylinder inlet . . . . .	5-35, 5-36	5-66-1 to 5-66-12
Clutch pedal . . . . .	6-10	6-38-1 to 6-38-12	Connection and cable, chassis wiring . . . . .	8-14, 8-15	8-16-2 to 8-16-8

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Control, choke . . . . .	14-19, 14-20	14-63-1 to 14-63-63	Cover, clutch housing . . . . .	6-6, 6-7	6-10-2 6-10-18
Control, directional signal lamp . . . . .	8-37	8-50-82	Cover, fuel pump . . . . .	14-22	14-76-1 to 14-76-12
Control, door locks and remote . . . . .	23-27, 23-28	23-18-3 to 23-18-14	Cover, gearshift (3 speed) . . . . .	21-16	21-29-2 to 21-29-25
Control, horn . . . . .	8-31, 8-32	8-33-4 to 8-33-185	(4 speed) . . . . .	21-24, 21-25	21-29-2 to 21-29-51
Core, radiator . . . . .	7-8, 7-9	7-11-3	(5 speed) . . . . .	21-38, 21-39	21-29-2 to 21-29-33
Countershaft (3 speed) . . . . .	21-16	21-24-2 to 21-24-19	Cover, oil pump . . . . .	10-6	10-08-2 to 10-08-3
(4 speed) . . . . .	21-22, 21-23	21-24-2 to 21-24-25	Cover, steering gear housing . . . . .	19-7, 19-8	19-04-1 to 19-04-13
(5 speed) . . . . .	21-36, 21-37	21-24-1 to 21-24-2	Cover, valve spring . . . . .	9-24	9-40-1 to 9-40-13
Countershaft bearing (3 speed) . . . . .	21-16	21-25-2 to 21-25-4	Cowl trim panel . . . . .	23-42	23-91-6 to 23-91-19
(4 speed) . . . . .	21-24, 21-25	21-25-2 to 21-25-4	Cowl ventilator . . . . .	23-33, 23-34	23-61-29 to 23-61-132
(5 speed) . . . . .	21-36, 21-37	21-25-2 to 21-25-4	Crank, throttle control bell . . . . .	14-7 to 14-9	14-14-1 to 14-14-24
Countershaft free wheeling cam roller (4 speed) . . . . .	21-28	21-49-3 to 21-49-25	Crankcase breather . . . . .	10-4, 10-5	10-01-9 10-01-44
Countershaft front bearing (5 speed) . . . . .	21-38, 21-39	21-26-3 to 21-26-11	Crankcase oil filler . . . . .	10-4, 10-5	10-01-9 to 10-01-44
Countershaft front bearing retainer (4 speed) . . . . .	21-24, 21-25	21-26-3 to 21-26-11	Crankcase ventilator . . . . .	10-5	10-02-8 to 10-02-17
Countershaft gear (3 speed) . . . . .	21-15	21-15-2 to 21-15-33	Crankshaft . . . . .	9-8, 9-9	9-07-5 to 9-07-13
(4 speed) . . . . .	21-22, 21-23	21-15-2 to 21-15-38	Crankshaft bearing . . . . .	9-9 to 9-11	9-09-2 to 9-10-5
(5 speed) . . . . .	21-36, 21-37	21-15-2 21-15-33	Crankshaft bearing cap . . . . .	9-11, 9-12	9-10-27 to 9-11-1
Countershaft over-running gear (4 speed) . . . . .	21-24, 21-25	21-28-2 to 21-28-8	Crankshaft bearing oil seal . . . . .	9-12	9-11-1 to 9-11-12
Countershaft rear bearing . . . . .	21-24, 21-25	21-27-2 to 21-27-3	Crankshaft bearing stud . . . . .	9-11, 9-12	9-10-5 to 9-10-27
(5 speed) . . . . .	21-38, 21-39	21-27-2 21-27-21	Crankshaft gear . . . . .	9-9	9-08-5
Cover, battery . . . . .	23-19	23-03-2	Crankshaft sprocket . . . . .	9-9	9-08-5
Cover, battery hold-down . . . . .	13-8	13-34-3 to 13-34-6	Crankshaft vibration damper . . . . .	9-12	9-13-5 to 9-13-26
Cover, chain case . . . . .	9-14, 9-15	9-23-1 to 9-23-40	Cross, universal joint . . . . .	16-19	16-08-6 to 16-08-19
			Crossmember, frame intermediate . . . . .	13-6	13-16-2
			Crossmember, frame rear . . . . .	13-6, 13-7	13-18-4

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Crossmember, frame rear spring front . . . . .	13-7	13-23-1	Differential pinion shaft . . . . .	3-30, 3-31	3-08-1 to 3-08-9
Crossmember, frame rear spring intermediate . . . . .	13-7	13-19-1	Differential side gear . . . . .	3-28, 3-29	3-06-5 to 3-06-6
Crossmember, frame rear spring rear . . . . .	13-7	13-24-1	Differential spider . . . . .	3-31	3-10-1
Crossmember, propeller shaft center bearing . . . . .	13-5, 13-6	13-05-1 to 13-05-3	Differential spiral pinion . . . . .	3-33, 3-34	3-12-1 to 3-12-3
Cup, master cylinder piston . . . . .	5-29, 5-30	5-45-1 to 5-45-8	Differential spiral pinion or shaft bearing . . . . .	3-34 to 3-36	3-13-1 to 3-13-14
Cup, wheel cylinder piston . . . . .	5-37 to 5-39	5-71-1 to 5-71-2	Differential spiral pinion or shaft bearing cage . . . . .	3-36 to 3-38	3-14-1 to 3-14-7
Cylinder, booster brake . . . . .	5-41 to 5-43	5-100-1 to 5-100-85	Differential spiral pinion or shaft gear . . . . .	3-39	3-15-7
Cylinder, master . . . . .	5-28, 5-29	5-39-1 to 5-39-25	Dimmer switch . . . . .	8-44	8-53-150
Cylinder, wheel . . . . .	5-34, 5-35	5-64-1 to 5-64-5	Direct speed piston . . . . .	21-48, 21-49	21-120-3 to 21-120-15
Cylinder and key, lock . . . . .	23-27	23-17-2 to 23-17-28	Directional signal and parking lamp . . . . .	8-37, 8-38	8-50-55 to 8-50-372
Cylinder block . . . . .	9-6, 9-7	9-02-5 to 9-02-35	Directional signal lamp . . . . .	1-11, 1-12	1-25-5 to 1-25-75
Cylinder head . . . . .	9-7, 9-8	9-03-4 to 9-03-13	Directional signal lamp control . . . . .	8-37	8-50-82
Cylinder water outlet elbow . . . . .	9-8	9-05-5 to 9-05-6	Directional signal lamp control switch . . . . .	1-11	1-25-9
<b>D</b>			Disc, clutch . . . . .	6-7	6-13-1 to 6-13-8
Damper, crankshaft vibration . . . . .	9-12	9-13-5 to 9-13-26	Distributor, ignition . . . . .	8-16 to 8-21	8-27-1 to 8-27-353
Diaphragm, fuel pump . . . . .	14-22, 14-23	14-77-1 to 14-77-23	Dome lamp . . . . .	8-13	8-05-6 to 8-05-14
Diaphragm, wheel brake . . . . .	5-40	5-95-8 to 5-95-12	Dome lamp cable . . . . .	8-13	8-06-2 to 8-06-5
Differential and carrier . . . . .	3-19 to 3-26	3-03-1 to 3-03-54	Door . . . . .	23-24	23-11-1 to 23-11-4
Differential bearing . . . . .	3-31 to 3-33	3-11-1 to 3-11-17	Door check arm . . . . .	23-23, 23-23	23-10-1 to 23-10-17
Differential case . . . . .	3-26, 3-27	3-04-6 to 3-04-11	Door handle . . . . .	23-25	23-14-10 to 23-14-53
Differential gear support . . . . .	3-27, 3-28	3-05-1 to 3-05-6	Door hinge . . . . .	23-26, 23-27	23-15-1 to 23-15-19
Differential pinion . . . . .	3-29, 3-30	3-07-1 to 3-07-3	Door locks and remote control . . . . .	23-27, 23-28	23-18-3 to 23-18-14
			Dovetail, body . . . . .	23-22, 23-23	23-08-12 to 23-08-70
			Drag link . . . . .	2-9 to 2-11	2-02-1 to 2-02-57



PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Drain cock, radiator . . . . .	7-9, 7-10	7-13-2	Engine rear support . . . . .	9-30	9-69-49
Drip moulding . . . . .	23-33	23-59-46 to 23-59-57	Engine rear support bracket . . . . .	9-30	9-70-4 to 9-70-9
Drive, fluid . . . . .	9-25, 9-26	9-46-4 to 9-46-69	Engine rear support insulator . . . . .	9-31, 9-32	9-71-5 9-71-14
Drive gear and pinion . . . . .	3-39 to 3-44	3-19-1 to 3-19-18	Engine support . . . . .	9-29	9-64-5 to 9-64-35
Drive gear bolt . . . . .	3-44 to 3-46	3-20-1 to 3-20-19	Exhaust pipe . . . . .	11-3	11-05-1
Drive gear rivet . . . . .	3-44 to 3-46	3-20-1 to 3-20-19	Exhaust pipe flange . . . . .	11-3	11-06-8
Drive gear screw . . . . .	3-44 to 3-46	3-20-1 to 3-20-19	Exhaust valve . . . . .	9-22 to 9-24	9-39-1 to 9-39-17
Drive pinion bearing . . . . .	3-46 to 3-57	3-22-7 to 3-22-103	Expander, piston . . . . .	9-22	9-38-1 to 9-38-2
Drive pinion bearing cage . . . . .	3-57, 3-58	3-23-1 to 3-23-15	Expander, wheel cylinder piston cup . . . . .	5-39	5-72-1
Drive shaft . . . . .	3-62, 3-63	3-32-1 to 3-32-8	Extension, case (4 speed) . . . . .	21-18, 21-19	21-04-1 to 21-04-13
Drive shaft bearing . . . . .	3-63	3-33-1 to 3-33-24	Extension, frame . . . . .	13-9	13-42-5
Drive shaft flange . . . . .	3-63, 3-64	3-36-1 to 3-36-8	Extension, rear fender . . . . .	12-9	12-24-1 to 12-24-4
Drive shaft oil seal . . . . .	3-63	3-35-14	<b>F</b>		
Drum, hand brake . . . . .	4-4, 4-5	4-01-1 4-01-2	Facing and shoe, brake . . . . .	5-16 to 5-20	5-03-1 to 5-03-33
Drum, hub and brake . . . . .	22-6 to 22-10	22-03-1 to 22-03-2	Fan . . . . .	7-7	7-02-1 to 7-02-16
Drum, wheel brake . . . . .	22-10, 22-11	22-04-1 to 22-04-29	Fan and generator belt . . . . .	7-7	7-03-1
<b>E</b>			Fan pulley . . . . .	7-8	7-06-1 to 7-06-14
Economizer, carburetor vacuum . . . . .	14-18	14-46-1	Fan pulley hub . . . . .	7-8	7-05-1
Elbow, booster brake tube . . . . .	5-46	5-108-5 to 5-108-13	Fan shroud . . . . .	7-8	7-08-2
Elbow, cylinder water outlet . . . . .	9-8	9-05-5 to 9-05-6	Fastner, body . . . . .	23-45	23-115-6 to 23-115-8
Elbow, water pump by-pass . . . . .	7-19	7-48-12 to 7-48-57	Fender, front . . . . .	12-3	12-01-5 to 12-01-48
Engine . . . . .	9-5	9-01-5 to 9-01-19	Fender, rear . . . . .	12-7 to 12-9	12-18-5 to 12-18-54
Engine dust pan . . . . .	12-11	12-31-2 to 12-31-35	Filler, body . . . . .	23-44, 23-45	23-113-12 to 23-113-74
Engine front support insulator . . . . .	9-30	9-67-4	Filler, crankcase oil . . . . .	10-4, 10-5	10-01-9 to 10-01-44
Engine front support plate . . . . .	9-30	9-65-6 to 9-65-9	Filler, front fender . . . . .	12-3, 12-4	12-02-5 to 12-02-15
			Filter, fuel . . . . .	14-20	14-67-1 to 14-67-23
			Filter, oil . . . . .	10-9, 10-10	10-26-1 to 10-26-49
			Flange, carburetor body . . . . .	14-12	14-33-1 to 14-33-5

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Flange, clutch release fork . . . . .	6-10	6-26-1 to 6-26-14	Fresh air intake . . . . .	1-18	1-53-1 to 1-53-65
Flange, drive shaft . . . . .	3-63, 3-64	3-36-1 to 3-36-8	Front axle I-beam . . . . .	2-9	2-01-2
Flange, exhaust pipe . . . . .	11-3	11-06-8	Front bumper . . . . .	13-11, 13-12	13-64-3 to 13-64-20
Flange, propeller shaft . . . . .	16-26	16-20-1 to 16-20-3	Front bumper buffer plate . . . . .	13-12, 13-13	13-68-6 to 13-68-17
Float, carburetor . . . . .	16-29 14-16	16-20-3 14-40-1 to 14-40-7	Front door arm rest . . . . .	23-41	23-76-3 to 23-76-16
Floor board . . . . .	23-19	23-04-4 to 23-21	Front door glass channel . . . . .	23-23	23-09-18 to 23-09-52
Floor mat . . . . .	23-28	23-04-224 23-46	Front door glass run . . . . .	23-31	23-42-16 to 23-42-67
Floor plug . . . . .	23-29	23-04-206 23-20-8	Front door trim panel . . . . .	23-42, 23-43	23-92-5 to 23-92-8
Fluid drive . . . . .	9-25, 9-26	9-46-4 to 9-46-69	Front door window regulator . . . . .	23-31	23-39-5 to 23-39-53
Flywheel . . . . .	9-24, 9-25	9-45-1 to 9-45-7	Front fender . . . . .	12-3	12-01-5 to 12-01-48
Flywheel housing . . . . .	9-26	9-47-5 to 9-47-20	Front fender anti-squeak . . . . .	12-3, 12-4	12-02-5 to 12-02-15
Fog light . . . . .	1-12, 1-13	1-34-1 to 1-34-44	Front fender bracket . . . . .	12-6	12-06-3 to 12-06-20
Fog light switch . . . . .	1-13	1-34-29	Front fender filler . . . . .	12-3, 12-4	12-02-5 to 12-02-15
Fork, clutch release . . . . .	6-9, 6-10	6-22-1 to 6-22-30	Front fender housing brace . . . . .	12-6	12-07-1 to 12-07-4
Fork, gearshift (4 speed) . . . . .	21-28, 21-29	21-39-6 to 21-39-23	Front fender housing bracket . . . . .	12-6	12-06-3 to 12-06-20
Fork, shifter . . . . .	3-64	21-39-23 3-46-1 to 3-46-11	Front fender liner . . . . .	12-3, 12-4	12-02-5 to 12-02-15
Fork, sliding clutch shifter . . . . .	3-65	3-51-2 to 3-51-22	Front fender seal . . . . .	12-3, 12-4	12-02-5 to 12-02-15
Frame . . . . .	13-2, 13-4	13-01-1	Front fender splash shield . . . . .	12-4, 12-5	12-04-4 to 12-01-38
Frame brake tube . . . . .	5-30	5-53-7 to 5-53-38	Front fender step . . . . .	12-6, 12-7	12-09-1 to 12-09-5
Frame clinch nut . . . . .	13-7	13-32-1	Front fender support bracket . . . . .	12-5	12-05-15
Frame extension . . . . .	13-9	13-42-5	Front fender wilt . . . . .	12-3, 12-4	12-02-5 to 12-02-15
Frame gusset . . . . .	13-9, 13-10	13-46-7 to 13-46-16	Front seat . . . . .	23-32	23-45-45 to 23-45-270
Frame intermediate crossmember . . . . .	13-6	13-16-2	Front seal back cushion hinge . . . . .	23-32	23-46-3 to 23-46-9
Frame rear crossmember . . . . .	13-6, 13-7	13-18-4	Front seat trim . . . . .	23-43, 23-44	23-108-2 to 23-108-16
Frame rear spring front crossmember . . . . .	13-7	13-23-1	Front section . . . . .	23-25	23-12-1
Frame rear spring intermediate crossmember . . . . .	13-7	13-19-1			
Frame rear spring rear crossmember . . . . .	13-7	13-24-1			
Frame side rail . . . . .	13-4, 13-5	13-03-2 to 13-03-12			

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Front spring and bushing . . . . .	17-5	17-01-2 to 17-01-17	Fuel tank support . . . . .	14-29 to 14-32	14-88-2 to 14-88-41
Front spring bolt . . . . .	17-6	17-04-1 to 17-04-9	Fuel tank tubing . . . . .	14-32	14-89-15 to 14-89-57
Front spring bracket . . . . .	13-10	13-53-3 to 13-53-22	Fuel tube clips and union . . . . .	14-33	14-90-1 to 14-90-20
Front spring bumper . . . . .	17-8	17-08-3			
Front spring clip . . . . .	17-6	17-05-1 to 17-05-6	<b>G</b>		
Front spring hanger . . . . .	13-10	13-53-3 to 13-53-22	Gasket, carburetor . . . . .	14-12, 14-13	14-34-2 to 14-34-37
Front spring leaf . . . . .	17-6	17-02-5	Gasket, manifold . . . . .	9-28, 9-29	9-50-1 to 9-50-14
Front spring shackle . . . . .	17-7, 17-8	17-06-1 to 17-06-17	Gates and racks . . . . .	23-49	23-68-1 to 23-68-17
Front wheel bearing . . . . .	22-16 to 22-19	22-06-1 to 22-06-20	Gear, camshaft . . . . .	9-13	9-17-5 to 9-17-20
Fuel filter . . . . .	14-20	14-67-1 to 14-67-23	Gear, countershaft (3 speed) . . . . .	21-15	21-15-2 to 21-15-33
Fuel gauge switch . . . . .	8-44	8-53-199	(4 speed) . . . . .	21-22, 21-23	21-15-2 to 21-15-38
Fuel gauge tank unit . . . . .	14-20, 14-21	14-72-1 to 14-72-47	(5 speed) . . . . .	21-36, 21-37	21-15-2 to 21-15-33
Fuel pump . . . . .	14-21, 14-22	14-73-2 to 14-73-7	Gear, countershaft over-running (4 speed) . . . . .	21-24, 21-25	21-28-2 to 21-28-8
Fuel pump body . . . . .	14-22	14-75-1 to 14-75-4	Gear, crankshaft . . . . .	9-9	9-08-5
Fuel pump cover . . . . .	14-22	14-76-1 to 14-76-12	Gear, differential side . . . . .	3-28, 3-29	3-06-5 to 3-06-6
Fuel pump diaphragm . . . . .	14-22, 14-23	14-77-1 to 14-77-23	Gear, differential spiral pinion or shaft . . . . .	3-39	3-15-7
Fuel pump heat shield . . . . .	14-23	14-81-1 to 14-81-2	Gear, main drive (3 speed) . . . . .	21-15	21-09-2 to 21-09-36
Fuel pump mounting . . . . .	14-22	14-74-1	(4 speed) . . . . .	21-18, 21-19	21-09-2 to 21-09-36
Fuel pump rocker arm . . . . .	14-23	14-79-1 to 14-79-20	Gear, main shaft (3 speed) . . . . .	21-15	21-10-4 to 21-10-16
Fuel pump strainer . . . . .	14-23	14-80-1 to 14-80-8	(4 speed) . . . . .	21-18 21-19	21-10-3 to 21-10-97
Fuel pump tube and hose . . . . .	14-24, 14-25	14-85-1 to 14-85-27	Gear, main shaft (5 speed) . . . . .	21-32, 21-33	21-10-4 to 21-10-69
Fuel pump vacuum section . . . . .	14-23	14-83-3 to 14-83-38	Gear, oil pump drive . . . . .	10-7	10-10-1 to 10-10-3
Fuel pump valve . . . . .	14-23	14-78-3 to 14-78-10			
Fuel tank . . . . .	14-25 to 14-29	14-86-1 to 14-86-60			
Fuel tank locking cap . . . . .	1-13, 1-14	1-39-2 to 1-39-5			

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Gear, oil pump driven . . . . .	10-7	10-11-1	Gearshift lever		
Gear, oil pump idler gear . . . . .	10-7	10-12-1	(3 speed) . . . . .	21-16, 21-17	21-30-2 to 21-30-183
		to 10-12-4	(4 speed) . . . . .	21-24, 21-27	21-30-2 to 21-30-183
Gear, overdrive (5 speed) . . . . .	21-42, 21-43	21-54-29 to 21-54-43	(5 speed) . . . . .	21-38 to 21-41	21-30-1 to 21-30-164
Gear, reverse idler (3 speed) . . . . .	21-15	21-11-1 to 21-11-2	Gearshift parts, remote control (3 speed) . . . . .	21-17	21-42-3 to 21-42-37
(4 speed) . . . . .	21-20, 21-21	21-11-1 to 21-11-11	Gearshift rail (3 speed) . . . . .	21-17	21-34-8 to 21-34-92
Gear, sliding clutch . . . . .	3-65	3-50-1	(4 speed) . . . . .	21-26, 21-27	21-34-8 to 21-34-85
Gear, steering . . . . .	19-4	19-01-5 to 19-01-34	(5 speed) . . . . .	21-40 to 21-43	21-34-8 to 21-34-68
		to 19-01-34	Gearshift, remote control (4 speed) . . . . .	21-28, 21-29	21-42-11 to 21-42-57
Gear and pinion, drive . . . . .	3-39	3-19-1 to 3-19-18	Gearshift reverse latch plunger (4 speed) . . . . .	21-28, 21-29	21-41-2 to 21-41-5
		to 3-19-18	Generator . . . . .	8-22 to 8-25	8-28-3 to 8-28-300
Gear and pinion, speedometer . . . . .	21-44	21-85-4 to 21-85-76	Generator component parts . . . . .	8-25 to 8-30	8-29-1 to 8-29-327
		to 21-85-76	Glove box . . . . .	23-22	23-06-4 to 23-06-89
Gear and shaft, oil pump drive . . . . .	10-7	10-09-2 to 10-09-19	Governor . . . . .	14-20	14-68-4 to 14-68-20
Gear and sleeve, clutch (3 speed) . . . . .	21-15	21-14-2 to 21-14-21	Governor, kickdown (4 speed) . . . . .	21-30, 21-31	21-75-1 to 21-75-14
(4 speed) . . . . .	21-20, 21-21	21-14-1 to 21-14-20	Grab handle . . . . .	23-41	23-77-4 to 23-77-8
(5 speed) . . . . .	21-34, 21-35	21-14-5 to 21-14-20	Grille, radiator . . . . .	7-11 to 7-16	7-16-27 to 7-16-84
Gearshift control rod . . . . .	19-17	19-48-1	Grommet . . . . .	8-30	8-30-5 to 8-30-53
Gearshift cover (3 speed) . . . . .	21-16	21-29-2 to 21-29-25	Guard, propeller shaft . . . . .	16-21, 16-22	16-15-6 to 16-15-9
		to 21-29-25	Guard, radiator . . . . .	1-10	1-01-4 to 1-01-5
		21-24, 21-25	Guide, brack shoe . . . . .	5-26	5-25-1 to 5-25-5
		to 21-29-51			
		21-38, 21-39			
		to 21-29-33			
Gearshift first and reverse latch plunger (5 speed) . . . . .	21-42, 21-43	21-41-2 to 21-41-5			
Gearshift fork (4 speed) . . . . .	21-28, 21-29	21-39-6 to 21-39-23			
		to 21-39-23			
		21-42, 21-43			
		to 21-39-23			
Gearshift housing (3 speed) . . . . .	21-16	21-29-2 to 21-29-25			
		to 21-29-25			
		21-24, 21-25			
		to 21-29-2			
		to 21-29-51			

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Guide and housing, throttle control . . .	14-9	14-25-6 to 14-25-7	Handle, door . . . . .	23-25	23-14-10 to 23-14-53
Gusset, frame . . . . .	13-9, 13-10	13-46-7 to 13-46-16	Handle, grab . . . . .	23-41	23-77-4 to 23-77-8
<b>H</b>					
Halves, hood . . . . .	15-3	15-01-2 to 15-01-12	Handle, hood . . . . .	15-5	15-18-3
Hand brake adjuster . . . . .	4-7, 4-8	4-07-1 to 4-07-28	Handle, regulator . . . . .	23-25	23-14-10 to 23-14-53
Hand brake anchor . . . . .	4-7	4-06-1 to 4-06-20	Hanger, front spring . . . . .	13-10	13-53-3 to 13-53-22
Hand brake bank and lining . . . . .	4-5, 4-6	4-03-1 to 4-03-11	Hanger, rear spring . . . . .	13-10, 13-11	13-54-4 to 13-54-15
Hand brake bracket . . . . .	4-7	4-06-1 to 4-06-20	Hanger, running board . . . . .	13-10	13-48-1
Hand brake cam lever . . . . .	4-11 to 4-13	4-26-1 to 4-26-23	Head, cylinder . . . . .	9-7, 9-8	9-03-4 to 9-03-13
Hand brake control cable . . . . .	4-11	4-23-1 to 4-23-28	Headlamp . . . . .	8-32	8-34-1 to 8-34-238
Hand brake drum . . . . .	4-4, 4-5	4-01-1 to 4-01-2	Headlamp beam indicator . . . . .	8-36	8-39-15 to 8-39-18
Hand brake lever . . . . .	4-8	4-08-1 to 4-08-33	Headlamp cable terminal block . . . . .	8-16	8-21-1 to 8-21-11
Hand brake lever button . . . . .	4-9	4-14-1 to 4-14-27	Headlamp switch . . . . .	8-45	8-53-270
Hand brake lever pawl . . . . .	4-8	4-13-1 to 4-13-10	Headlining and listing . . . . .	23-41, 23-42	23-86-10 to 23-86-26
Hand brake lever pawl rod . . . . .	4-11	4-21-1 to 4-21-22	Heater . . . . .	1-14 to 1-18	1-48-1 to 1-48-958
Hand brake lever pull rod . . . . .	4-9 to 4-11	4-20-2 to 4-20-19	Heater switch . . . . .	1-17	1-48-770
Hand brake lever sector . . . . .	4-8	4-12-1 to 4-12-2	Hinge, door . . . . .	23-26, 23-27	23-15-1 to 23-15-19
Hand brake lever shaft . . . . .	4-9	4-17-5 to 4-17-7	Hinge, front seat back cushion . . . . .	23-32	23-46-3 to 23-46-9
Hand brake lever spoon . . . . .	4-9	4-14-1 to 4-14-27	Hinge, hood . . . . .	15-5	15-19-2 to 15-19-38
Hand brake pull back spring . . . . .	4-9	4-19-1 to 4-19-5	Holder, brake . . . . .	1-14	1-43-1 to 1-43-23
Hand brake pull rod . . . . .	4-8	4-08-1 to 4-08-33	Hood . . . . .	15-3	15-01-2 to 15-01-12
Hand brake pull rod pawl . . . . .	4-8, 4-9	4-13-1 to 4-13-10	Hood anti-squeak . . . . .	15-4	15-09-4 to 15-09-15
Hand brake support . . . . .	4-13	4-29-1 to 4-29-3	Hood bumper . . . . .	15-4	15-09-4 to 15-09-15
			Hood center panel . . . . .	15-3	15-03-2 to 15-03-31
			Hood halves . . . . .	15-3	15-01-2 to 15-01-12
			Hood handle . . . . .	15-5	15-18-3
			Hood hinge . . . . .	15-5	15-19-2 to 15-19-38

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Hood lacing . . . . .	15-8	15-27-1 to 15-27-2	Housing, propeller shaft center bearing . . . . .	16-25, 16-26	16-17-1 to 16-17-18
Hood ledge . . . . .	15-8	15-26-11	Housing, rear axle . . . . .	3-18, 3-19	3-02-1 to 3-02-23
Hood lock catch . . . . .	15-5	15-15-1 to 15-15-7	Housing, steering gear . . . . .	19-6, 19-7	19-02-4 to 19-02-17
Hood moulding . . . . .	15-8	15-25-2 to 15-25-18	Housing and guide, throttle control . .	14-9	14-25-6 to 14-25-7
Hood name medallion . . . . .	15-3, 15-4	15-06-3 to 15-06-13	Hub, fan pulley . . . . .	7-8	7-05-1
Hood name plate . . . . .	15-3, 15-4	15-06-3 to 15-06-13	Hub, wheel . . . . .	22-12 to 22-16	22-05-1 to 22-05-45
Hood ornament . . . . .	1-20	1-130-1 to 1-130-3	Hub and brake drum . . . . .	22-6 to 22-10	22-03-1 to 22-03-2
Hood pintle . . . . .	13-11	13-62-2 to 13-62-10	Hub cap . . . . .	22-1	22-08-5 to 22-08-57
Hood prop . . . . .	15-6 to 15-8	15-21-1 to 15-21-32	I-beam, front axle . . . . .	2-9	2-01-2
Hood side panel . . . . .	15-3	15-02-3 to 15-02-17	Idler, reverse (5 speed) . . . . .	21-34, 21-35	21-11-1 to 21-11-11
Hood side panel lock . . . . .	15-4, 15-5	15-11-3 to 15-11-31	Idler pinion . . . . .	3-58	3-30-1 to 3-30-2
Hood support . . . . .	15-6 to 15-8	15-21-1 to 15-21-32	Idling parts, carburetor . . . . .	14-18	14-45-1
Hook, tow . . . . .	13-11	13-61-2	Ignition coil and switch . . . . .	8-32, 8-33	8-35-4 to 8-35-122
Horn . . . . .	8-30, 8-31	8-32-2 to 8-32-213	Ignition distributor . . . . .	8-16 to 8-21	8-27-1 to 8-27-353
Horn, carburetor air . . . . .	14-18	14-47-1 to 14-47-3	Ignition wiring and spark plug . . . . .	8-33	8-36-1 to 8-36-119
Horn control . . . . .	8-31, 8-32	8-33-4 to 8-33-185	Impeller and shaft, water pump . . . . .	7-18, 7-19	7-45-2 to 7-45-54
Hose, booster brake . . . . .	5-46	5-111-6	Indicator, headlamp beam . . . . .	8-36	8-39-15 to 8-39-18
Hose, brake flexible . . . . .	5-33	5-62-1 to 5-62-17	Indicator oil lever . . . . .	10-5	10-03-4 to 10-03-12
Hose and tube, fuel pump . . . . .	14-24, 14-25	14-85-1 to 14-85-27	Instrument lamp . . . . .	8-36	8-41-36 to 8-41-40
Hose and tube, radiator . . . . .	7-10, 7-11	7-14-1 to 7-14-26	Instrument lock switch . . . . .	8-32	8-35-59
Housing, clutch . . . . .	6-5, 6-6	6-09-1 to 6-09-10	Instrument panel . . . . .	23-30 to 23-33-126	23-33-3 to 23-33-126
Housing, flywheel . . . . .	9-26	9-47-5 to 9-47-20	Instrument panel instruments . . . . .	8-34 to 8-36	8-37-1 to 8-37-526
Housing, gearshift (3 speed) . . . . .	21-16	21-29-2 to 21-29-25	Instrument panel lamp screw switch . .	8-44	8-53-210
(4 speed) . . . . .	21-24, 21-25	21-29-2 to 21-29-51	Instrument panel wiring . . . . .	8-15, 8-16	8-19-26 to 8-19-68

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Instruments, instrument panel . . . . .	8-34	8-37-1	Lamp, instrument . . . . .	8-36	8-41-36
	to	to			to
	8-36	8-37-526			8-41-40
Insulator, body . . . . .	23-29	23-31-6	Lamp, license . . . . .	8-46	8-57-18
		to			to
		23-31-119			8-57-109
	23-46	23-31-32	Lamp, marker and clearance . . . . .	8-37	8-48-25
		to			to
		23-31-53			8-48-35
Insulator, engine front support . . . . .	9-30	9-67-4	Lamp, tail . . . . .	8-45,	8-55-7
Insulator, engine rear support . . . . .	9-31,	9-71-5		8-46	to
	9-32	to			8-55-301
		9-71-14	Lamp bulb . . . . .	8-36	8-44-1
Intake, fresh air . . . . .	1-18	1-53-1	Leaf, front spring . . . . .	17-6	17-02-5
		to	Leaf, rear spring . . . . .	17-13	17-12-4
		1-53-65			to
Intake and exhaust manifold . . . . .	9-26	9-48-5			17-12-8
	to	to	Ledge, hood . . . . .	15-8	15-26-11
	9-28	9-48-141	Lever, brake operating . . . . .	5-39,	5-76-1
Intake valve . . . . .	9-22	9-39-1		5-40	to
	to	to			5-76-6
	9-24	9-39-17	Lever, brake shoe . . . . .	5-20	5-04-1
Interrupter switch . . . . .	21-48	21-113-3	Lever, clutch operating . . . . .	6-11	6-48-1
		to			to
		21-113-10			6-48-25
			Lever, clutch release . . . . .	6-9	6-17-1
					to
					6-17-11
			Lever, clutch release fork . . . . .	6-10	6-27-2
					to
					6-27-12
Jacket, steering gear column . . . . .	19-9,	19-14-1	Lever, gearshift (3 speed) . . . . .	21-16,	21-30-2
	19-10	to		21-17	to
		19-14-74			21-30-183
Jet, carburetor . . . . .	14-13	14-35-1			to
		to			21-30-1
		14-35-8			to
Joint, throttle control ball . . . . .	14-7	14-13-1			21-30-164
					to
					21-30-1
					to
					21-30-164
					to
					4-08-1
					to
					4-08-33
					to
					4-26-1
					to
					4-26-23
					to
					14-17-1
					to
					8-57-18
					to
					8-57-109
					to
					8-47-8
					to
					8-47-75
					to
					1-34-1
					to
					1-34-44
					to
					1-15-1
					to
					1-15-3
					to
					1-12-1
					to
					1-12-41
					to
					23-31-6
					to
					23-31-119
					to
					12-02-5
					to
					12-02-15

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Lining and band; hand brake . . . . .	4-5, 4-6	4-03-1 to 4-03-11	Main shaft rear bearing (5 speed) . . .	21-36, 21-37	21-19-2 to 21-19-9
Link, drag . . . . .	2-9 to 2-11	2-02-1 to 2-02-57	Main shaft rear bearing oil seal (3 speed) . . . . .	21-16	21-22-2
Listing and headlining . . . . .	23-41, 23-42	23-86-10 to 23-86-26	(4 speed) . . . . .	21-22, 21-23	21-22-2
Lock, hood side panel . . . . .	15-4, 15-5	15-11-3 to 15-11-31	(5 speed) . . . . .	21-36, 21-37	21-22-2
Lock, spare tire carrier . . . . .	22-25	22-48-4 to 22-48-14	Main shaft rear bearing retainer (3 speed) . . . . .	21-16	21-23-2 to 21-23-17
Lock cylinder and key . . . . .	23-27	23-17-2 to 23-17-28	(4 speed) . . . . .	21-22, 21-23	21-23-2 to 21-23-17
<b>M</b>					
Main control valve (4 speed) . . . . .	21-30, 21-31	21-83-4 to 21-83-14	Manifold, intake and exhaust . . . . .	9-26 to 9-28	9-48-5 to 9-48-141
Main drive bearing (5 speed) . . . . .	21-32, 21-33	21-09-2 to 21-09-36	Manifold gasket . . . . .	9-28, 9-29	9-50-1 to 9-50-14
Main drive gear (3 speed) . . . . .	21-15	21-09-2 to 21-09-36	Manifold heat control stop . . . . .	9-29	9-62-1 to 9-62-2
(4 speed) . . . . .	21-18, 21-19	21-09-2 to 21-09-36	Manifold heat control valve shaft and plate . . . . .	9-29	9-59-5 to 9-59-8
(5 speed) . . . . .	21-32, 21-33	21-09-2 to 21-09-36	Manifold heat control valve thermostat	9-29	9-58-1 to 9-58-14
Main drive retainer (5 speed) . . . . .	21-32, 21-33	21-09-2 to 21-09-36	Marker and clearance lamp . . . . .	8-37	8-48-25 to 8-48-35
Main shaft (3 speed) . . . . .	21-15	21-16-3	Master cylinder . . . . .	5-28, 5-29	5-39-1 to 5-39-25
(4 speed) . . . . .	21-22, 21-23	21-16-2 to 21-16-3	Master cylinder boot . . . . .	5-29	5-40-1 to 5-40-2
(5 speed) . . . . .	21-36, 21-37	21-16-3	Master cylinder brake tube . . . . .	5-30	5-52-10 to 5-52-19
Main shaft gear (3 speed) . . . . .	21-15	21-10-4 to 21-10-16	Master cylinder connection . . . . .	5-29	5-41-5
(4 speed) . . . . .	21-18	21-10-3 to 21-10-97	Master cylinder piston . . . . .	5-29	5-44-3 to 5-44-10
(5 speed) . . . . .	21-32	21-10-4 to 21-10-69	Master cylinder piston cup . . . . .	5-29, 5-30	5-45-1 to 5-45-8
Main shaft pilot bearing (3 speed) . . .	21-16	21-17-2 to 21-17-7	Master cylinder piston push rod . . . .	5-30	5-47-2 to 5-47-4
(4 speed) . . . . .	21-22, 21-23	21-17-2 to 21-17-9	Master cylinder piston return spring . .	5-30	5-46-1
(5 speed) . . . . .	21-22, 21-23	21-17-2 to 21-17-9	Master cylinder valve . . . . .	5-29	5-43-1 to 5-43-3
Main shaft rear bearing (3 speed) . . .	21-16	21-19-2 to 21-19-9	Mat, floor . . . . .	23-28	23-20-8
(4 speed) . . . . .	21-22, 21-23	21-19-2 to 21-19-15	Material, trimming . . . . .	23-45	23-114-15
			Medallion, hood name . . . . .	15-3, 15-4	15-06-3 to 15-06-13
			Medallion, radiator . . . . .	7-16	7-17-1 to 7-17-15



PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Metal panel . . . . .	23-30, 23-31	23-34-25 to 23-34-352	Oil pump cover . . . . .	10-6	10-08-2 to 10-08-3
	23-46, 23-47	23-34-12 to 23-34-79	Oil pump drive gear . . . . .	10-7	10-10-1 to 10-10-3
Mirror, rear view . . . . .	1-18 23-28	1-76-6 23-21-8 to 23-21-37	Oil pump drive shaft and gear . . . . .	10-7	10-09-2 to 10-09-19
Moulding, drip . . . . .	23-33	23-59-46 to 23-59-57	Oil pump driven gear . . . . .	10-7	10-11-1
Moulding, hood . . . . .	15-8	15-25-2 to 15-25-18	Oil pump idler gear . . . . .	10-7	10-12-1 to 10-12-4
Moulding, outside finish . . . . .	23-29	23-23-123	Oil pump outlet pipe . . . . .	10-7	10-16-4 to 10-16-15
Moulding, trim . . . . .	23-29	23-26-23 to 23-26-26	Oil pump outlet tube . . . . .	10-7	10-16-4 to 10-16-15
Moulding, windshield garnish . . . . .	23-28	23-22-145 to 23-22-158	Oil pump rotor . . . . .	10-7 21-48	10-14-19 21-118-33 to 21-118-34
Mounting, fuel pump . . . . .	14-22	14-74-1	Oil pump strainer . . . . .	21-48	21-117-1
Motor, starting . . . . .	8-39, 8-44	8-52-4 to 8-52-502	Oil pump suction pipe . . . . .	10-7	10-18-4
Muffler . . . . .	11-2	11-01-1	Oil strainer . . . . .	10-8	10-23-7
Muffler bracket and support . . . . .	11-2	11-02-4 to 11-02-49	Ornament, hood . . . . .	1-20	1-130-1 to 1-130-3
Muffler exhaust pipe clamp . . . . .	11-3, 11-4	11-08-1 to 11-08-19	Outside finish moulding . . . . .	23-29	23-23-123
Muffler tail pipe and clamp . . . . .	11-4	11-09-1 to 11-09-3	Overdrive gear (5 speed) . . . . .	21-42, 21-43	21-54-29 to 21-54-43
<b>N</b>			<b>P</b>		
Nozzle carburetor . . . . .	14-12	14-32-1	Package, connecting rod bearing . . . . .	9-16, 9-17	9-32-2
Nut, carburetor nut . . . . .	14-18, 14-19	14-54-3 to 14-54-130	Package, universal joint . . . . .	16-19	16-03-1
Nut, frame clinch . . . . .	13-7	13-32-1	Package, wheel cylinder . . . . .	5-33, 5-34	5-63-1 to 5-63-3
<b>O</b>			Pad, body . . . . .	23-29 23-46	23-31-6 to 23-31-119 23-31-32 to 23-31-53
Oil filter . . . . .	10-9, 10-10	10-26-1 to 10-26-49	Pad, brake pedal . . . . .	5-27	5-28-1 to 5-28-8
Oil filter tube . . . . .	10-10, 10-11	10-27-1 to 10-27-29	Pad, clutch pedal . . . . .	6-11	6-39-2 to 6-39-3
Oil gauge tube . . . . .	10-6	10-05-4 to 10-05-18	Pan, clutch housing . . . . .	6-6, 6-7	6-10-2 to 6-10-18
Oil lever indicator . . . . .	10-5	10-03-4 to 10-03-12	Pan, engine dust . . . . .	12-11	12-31-2 to 12-31-35
Oil pan . . . . .	10-8, 10-9	10-24-1 to 10-24-38	Pan, oil . . . . .	10-8, 10-9	10-24-1 to 10-24-38
Oil pressure relief valve . . . . .	10-7, 10-8	10-22-4 to 10-22-41	Panel, cowl trim . . . . .	23-42	23-91-6 to 23-91-19
Oil pump . . . . .	10-6	10-07-3 to 10-07-11	Panel, front door trim . . . . .	23-42, 23-43	23-92-5 to 23-92-8

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Panel, hood center . . . . .	15-3	15-03-2 to 15-03-31	Piston, carburetor pump . . . . .	14-17	14-42-3
Panel, hood side . . . . .	15-3	15-02-3 to 15-02-17	Piston, direct speed . . . . .	21-48, 21-49	21-120-3 to 21-120-15
Panel, instrument . . . . .	23-30	23-33-3 to 23-33-126	Piston, master cylinder . . . . .	5-29	5-44-3 to 5-44-10
Panel, metal . . . . .	23-30, 23-31	23-34-25 to 23-34-352	Piston, wheel cylinder . . . . .	5-36, 5-37	5-70-1
	23-46, 23-47	23-34-12 to 23-34-79	Piston expander . . . . .	9-22	9-38-1 to 9-38-2
Panel, rear trim . . . . .	23-42	23-89-10	Piston pin . . . . .	9-22	9-36-5 to 9-36-7
Parts and windshield . . . . .	23-36	23-66-29 to 23-66-235	Piston ring . . . . .	9-21, 9-22	9-35-1
Pawl, hand brake lever . . . . .	4-8, 4-9	4-13-1 to 4-13-10	Plate, brake shoe pressure . . . . .	5-20	5-09-3
Pawl, hand brake pull rod . . . . .	4-8, 4-9	4-13-1 to 4-13-10	Plate, chain case cover . . . . .	9-15	9-24-5 to 9-24-13
Pedal, accelerator . . . . .	14-6	14-01-1 to 14-01-18	Plate, clutch . . . . .	3-65	3-48-14 to 3-48-16
Pedal, clutch . . . . .	6-10	6-38-1 to 6-38-12	Plate, clutch cover and pressure . . . . .	6-8	6-14-1 to 6-14-16
Pedal and bushing, brake . . . . .	5-26, 5-27	5-27-1 to 5-27-28	Plate, clutch pressure . . . . .	6-8	6-15-1
Pin, brake shoe adjusting . . . . .	5-25	5-21-2	Plate, engine front support . . . . .	9-30	9-65-6 to 9-65-9
Pin, king . . . . .	2-13	2-04-1 to 2-04-24	Plate, front bumper buffer . . . . .	13-12, 13-13	13-68-6 to 13-68-17
Pin, piston . . . . .	9-22	9-36-5 to 9-36-7	Plate, hood name . . . . .	15-3, 15-4	15-06-3 to 15-06-13
Pinion, differential . . . . .	3-29, 3-30	3-07-1 to 3-07-3	Plate, water pump body cover . . . . .	7-18	7-44-2 to 7-44-6
Pinion, differential spiral . . . . .	3-33, 3-34	3-12-1 to 3-12-3	Plate and shaft, manifold heat control valve . . . . .	9-29	9-59-5 to 9-59-8
Pinion, idler . . . . .	3-58	3-30-1 to 3-30-2	Plate and support, battery . . . . .	13-7, 13-8	13-33-1 to 13-33-64
Pinion and gear, drive . . . . .	3-39 to 3-44	3-19-1 to 3-19-18	Plug, carburetor . . . . .	14-14, 14-15	14-37-2 to 14-37-42
Pinion and gear, speedometer . . . . .	21-44 to 21-47	21-85-4 to 21-85-76	Plug, floor . . . . .	23-29	23-32-36
Pintle hook . . . . .	13-11	13-62-2 to 13-62-10	Plug, ignition wiring and block . . . . .	8-33	8-36-1 to 8-36-119
Pipe, exhaust . . . . .	11-3	11-05-1	Plunger, gearshift first and reverse latch (5 speed) . . . . .	21-42, 21-43	21-41-2 to 21-41-5
Pipe, oil pump outlet . . . . .	10-7	10-16-4 to 10-16-15	Plunger, gearshift reverse latch (4 speed) . . . . .	21-28, 21-29	21-41-2 to 21-41-5
Pipe, oil pump suction . . . . .	10-7	10-18-4	Pot, carburetor dash . . . . .	14-18	14-50-1 to 14-50-11
Pipe and clamp muffler tail . . . . .	11-4	11-09-1 to 11-09-3	Power take-off (4 speed) . . . . .	21-18, 21-19	21-08-1 to 21-08-3
Piston . . . . .	9-17 to 9-20	9-34-5 to 9-34-6	Power take-off (5 speed) . . . . .	21-23, 21-33	21-08-1 to 21-08-3

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Prop, hood . . . . .	15-6	15-21-1	Radiator medallion . . . . .	7-16	7-17-1
	to	to			to
	15-8	15-21-32			7-17-15
Propeller shaft . . . . .	16-4	16-02-1	Radiator shell lacing . . . . .	7-11	7-15-1
	to	to	Radiator support . . . . .	7-16	7-29-1
	16-19	16-02-4			7-29-62
Propeller shaft center bearing . . . . .	16-22	16-16-1	Radiator tie rod . . . . .	7-16,	7-37-2
	to	to		7-17	to
	16-25	16-16-48			7-37-13
Propeller shaft center bearing cross-			Radiator tube and hose . . . . .	7-10,	7-14-1
member . . . . .	13-5,	13-05-1		7-11	to
	13-6	to			7-14-26
		13-05-3	Rail, body . . . . .	23-49	23-51-59
Propeller shaft center bearing housing	16-25,	16-17-1	Rail, frame side . . . . .	13-4,	13-03-2
	16-26	to		13-5	13-03-12
		16-17-18	Rail, gearshift		
Propeller shaft flange . . . . .	16-26	16-20-1	(3 speed) . . . . .	21-17	21-34-8
	to	to			to
	16-29	16-20-3			21-34-92
Propeller shaft guard . . . . .	16-21,	16-15-6	(4 speed) . . . . .	21-26,	21-34-8
	16-22	to		21-27	to
		16-15-9	(5 speed) . . . . .	21-40	21-34-85
Propeller shaft sliding yoke . . . . .	20-16	16-14-1		to	21-34-8
		to			to
		16-14-18		21-43	21-34-68
Propeller shaft spline . . . . .	20-16	16-14-1	Rear axle brake tube . . . . .	5-32	5-54-1
		16-14-18	Rear axle housing . . . . .	3-18,	3-02-1
Propeller shaft yoke . . . . .	16-26	16-20-1		3-19	to
	to	to			3-02-23
	16-29	16-20-3	Rear bumper . . . . .	13-12	13-66-3
Pulley, fan . . . . .	7-8	7-06-1			to
		to			13-66-66
		7-06-14	Rear fender . . . . .	12-7	12-18-5
Pump, auto pulse fuel . . . . .	14-24	14-84-1		to	to
		to		12-9	12-18-54
		14-84-23	Rear fender anti-squeak . . . . .	12-9	12-20-4
		to			to
Pump, carburetor . . . . .	14-16,	14-41-3			12-20-8
	14-17	to	Rear fender bracket . . . . .	12-9	12-21-1
		14-41-40	Rear fender extension . . . . .	12-9	12-24-1
Pump, fuel . . . . .	14-21,	14-73-2			to
	14-22	to			12-24-4
		14-73-7	Rear fender sealer . . . . .	12-9	12-20-4
Pump, water . . . . .	7-17	7-42-1			to
		to			12-20-8
		7-42-4	Rear fender welt . . . . .	12-9	12-20-4
Pump oil . . . . .	10-6	10-07-3			to
		to			12-20-8
		10-07-11	Rear spring bolt . . . . .	17-13,	17-14-1
				17-14	17-14-10
			Rear spring bracket . . . . .	13-10,	13-54-4
				13-11	to
					13-54-15
Racks and gates . . . . .	23-49	23-68-1	Rear spring bumper . . . . .	17-16	17-19-3
		to		to	to
		23-68-17		17-18	17-19-4
Radiator core . . . . .	7-8,	7-11-3	Rear spring clip . . . . .	17-14	17-15-1
	7-9				to
Radiator drain cock . . . . .	7-9,	7-13-2			17-15-6
	7-10		Rear spring hanger . . . . .	13-10,	13-54-4
Radiator filler cap . . . . .	7-9	7-12-1		13-11	to
		to			13-54-15
		7-12-4	Rear spring identification chart . . . . .	17-8,	-----
Radiator grille . . . . .	7-11	7-16-27		17-9	-----
	to	to	Rear spring leaf . . . . .	17-13	17-12-4
	7-16	7-16-84			to
Radiator guard . . . . .	1-10	1-01-4			17-12-8
		1-01-5			
Radiator guard brace . . . . .	7-19	7-51-2			

## R

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Rear spring shackle . . . . .	17-15, 17-16	17-16-1 to 17-16-15	Reverse idler gear (3 speed). . . . .	21-15	21-11-1 to 21-11-2
Rear spring and bushing . . . . .	17-10 to 17-13	17-11-1 to 17-11-35	(4 speed). . . . .	21-20, 21-21	21-11-1 to 21-11-11
Rear trim panel . . . . .	23-42	23-89-10	(5 speed). . . . .	21-34, 21-35	21-11-1 to 21-11-11
Rear view mirror . . . . .	1-18 23-28	1-76-6 23-21-8 to 23-21-37	Reverse idler shaft (3 speed). . . . .	21-15	21-12-1
Rear wheel bearing . . . . .	22-19 to 22-21	22-07-1 to 22-07-27	(4 speed). . . . .	21-20, 21-21	21-12-1
Rear wheel cylinder inlet connection . .	5-35, 5-36	5-66-1 to 5-66-12	(5 speed). . . . .	21-34, 21-35	21-12-1
Receiver, ash . . . . .	1-10	1-18-2 to 1-18-10	Rim, wheel . . . . .	22-22, 22-23	22-11-3 to 22-11-44
Reflector . . . . .	8-38	23-19 23-02-3 to 23-02-50	Ring, piston . . . . .	9-21, 9-22	9-35-1
Regulator, front door window . . . . .	23-31	8-51-1 to 8-51-2	Rivet, drive gear . . . . .	3-44 to 3-46	3-20-1 to 3-20-19
Regulator, seat. . . . .	23-32, 23-33	23-39-5 to 23-39-53	Rod, accelerator pedal . . . . .	14-6	14-07-1
Regulator handle . . . . .	23-25	23-47-6 to 23-47-115	Rod, brake operating lever . . . . .	5-40	5-77-1
Reinforcement, body . . . . .	23-22	23-14-10 to 23-14-53	Rod, brake shoe push . . . . .	5-20, 5-21	5-12-1 to 5-12-6
Remote control gearshift (4 speed) . .	21-28, 21-29	23-07-30 to 23-07-58	Rod, clutch operating . . . . .	6-11	6-50-1
Remote control gearshift parts (3 speed). . . . .	21-17	21-42-11 to 21-42-57	Rod, connecting. . . . .	9-15, 9-16	9-31-4 to 9-31-10
Reservoir, air brake . . . . .	5-48	21-42-3 to 21-42-37	Rod, gearshift control . . . . .	19-17	19-48-1
Rest, front door arm . . . . .	23-41	5-119-4 to 5-119-15	Rod, hand brake lever pawl. . . . .	4-11	4-21-1 to 4-21-22
Retainer, countershaft front bearing (4 speed) . . . . .	21-24, 21-25	23-76-3 to 23-76-16	Rod, hand brake lever pull . . . . .	4-9 to 4-11	4-20-2 to 4-20-19
Retainer, main drive (5 speed) . . . .	21-32, 21-33	21-26-3 to 21-26-11	Rod, master cylinder piston push. . .	5-30	5-47-2 to 5-47-4
Retainer, main shaft rear bearing (3 speed). . . . .	21-16	21-09-2 to 21-09-36	Rod, radiator tie . . . . .	7-16, 7-17	7-37-2 to 7-37-13
(4 speed). . . . .	21-22, 21-23	21-23-2 to 21-23-17	Rod, steering gear remote control . .	19-15, 19-16	19-46-3 to 19-46-20
(5 speed). . . . .	21-36, 21-37	21-23-2 to 21-23-17	Rod, steering gear remote control gearshift selector. . . . .	19-16	19-47-2 to 19-47-15
			Rod, steering tie . . . . .	2-16 to 2-18	2-07-1 to 2-07-51
			Roller, countershaft free wheeling cam (4 speed). . . . .	21-28	21-49-3 to 21-49-25
			Roller and bushing, universal joint cross . . . . .	16-20	16-10-1 to 16-10-7
			Roof bow . . . . .	23-31	23-40-25 to 23-40-31
			Rotor, oil pump . . . . .	10-7 21-48	10-14-19 21-118-33 to 21-118-34

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Run, front door glass . . . . .	23-31	23-42-16 to 23-42-67	Shaft, accelerator . . . . .	14-6, 14-7	14-11-1 to 14-11-28
Running board . . . . .	12-9 to 12-11	12-26-2 to 12-26-66	Shaft, brake cam . . . . .	5-40, 5-41	5-97-1 to 5-97-35
Running board hanger . . . . .	13-10	13-48-1	Shaft, brake pedal . . . . .	5-27	5-29-1 to 5-29-4
<b>S</b>					
Screen, center window . . . . .	23-31	23-43-20	Shaft, clutch pedal . . . . .	6-11	6-43-1 to 6-43-11
Screen, clutch housing vent . . . . .	6-7	6-11-2 to 6-11-6	Shaft, clutch release . . . . .	6-11	6-43-1 to 6-43-11
Screw, carburetor . . . . .	14-18, 14-19	14-54-3 to 14-54-130	Shaft, differential pinion . . . . .	3-30, 3-31	3-08-1 to 3-08-9
Screw, clutch pedal adjusting . . . . .	6-11	6-45-1 to 6-45-3	Shaft, drive . . . . .	3-62, 3-63	3-32-1 to 3-32-8
Screw, drive gear . . . . .	3-44 to 3-46	3-20-1 to 3-20-19	Shaft, hand brake lever . . . . .	4-9	4-17-5 to 4-17-7
Seal, body . . . . .	23-29	23-31-3 to 23-31-119	Shaft, main (3 speed) . . . . .	21-15	21-16-3
Seal, crankshaft bearing oil . . . . .	9-12	9-11-1 to 9-11-12	(4 speed) . . . . .	21-22, 21-23	21-16-2 to 21-16-3
Seal, drive shaft oil . . . . .	3-63	3-35-14	(5 speed) . . . . .	21-36, 21-37	21-16-3
Seal, front fender . . . . .	12-3, 12-4	12-02-5 to 12-02-15	Shaft, propeller . . . . .	16-4 to 16-19	16-02-1 to 16-02-4
Seal, main shaft rear bearing oil (3 speed) . . . . .	21-16	21-22-2	Shaft, reverse idler (3 speed) . . . . .	21-15	21-12-1
(4 speed) . . . . .	21-22, 21-23	21-22-2	(4 speed) . . . . .	21-20, 21-21	21-12-1
(5 speed) . . . . .	21-36, 21-37	21-22-2	(5 speed) . . . . .	21-34, 21-35	21-12-1
Seal, water pump . . . . .	7-19	7-46-1 to 7-46-13	Shaft, sliding clutch . . . . .	3-65	3-49-2 to 3-49-9
Sealer, rear fender . . . . .	12-9	12-20-4 to 12-20-8	Shaft, steering gear . . . . .	19-11 to 19-13	19-19-2 to 19-19-40
Seat, front . . . . .	23-32	23-45-45 to 23-45-270	Shaft and gear, oil pump drive . . . . .	10-7	10-09-2 to 10-09-19
Seat regulator . . . . .	23-32, 23-33	23-47-6 to 23-47-115	Shaft and impeller, water pump . . . . .	7-18, 7-19	7-45-2 to 7-45-54
Section, front . . . . .	23-24, 23-25	23-12-1	Shaft and plate, manifold heat control . . . . .	9-29	9-59-5 to 9-59-8
Section fuel pump vacuum . . . . .	14-23	14-83-3 to 14-83-38	Shield, brake support . . . . .	5-22, 5-23	5-16-1 to 5-16-5
Sector, hand brake lever . . . . .	4-8	4-12-1 to 4-12-2	Shield, cab heat . . . . .	12-11	12-37-2 to 12-37-4
Shackle, front spring . . . . .	17-7, 17-8	17-06-1 to 17-06-17	Shield, cab support dust . . . . .	12-11	12-34-2 to 12-34-4
Shackle, rear spring . . . . .	17-15, 17-16	17-16-1 to 17-16-15			

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Shield, front fender splash . . . . .	12-4, 12-5	12-04-4 to 12-04-38	Speedometer gear and pinion. . . . .	21-44 to 21-47	21-85-4 to 21-85-76
Shield, fuel pump heat. . . . .	14-23	14-81-1 to 14-81-2	Spider, differential . . . . .	3-31	3-10-1
Shift, vacuum. . . . .	3-58 to 3-62	3-31-1 to 3-31-80	Spline propeller shaft . . . . .	20-16	16-14-1 to 16-14-18
Shifter fork . . . . .	3-64	3-46-1 to 3-46-11	Spoon, hand brake lever . . . . .	4-9	4-14-1 to 4-14-27
Shock absorber . . . . .	17-18 to 17-21	17-23-3 to 17-23-56	Spotlight . . . . .	1-19, 1-20	1-108-1 to 1-108-48
Shock absorber bracket . . . . .	17-21 to 17-25	17-24-3 to 17-24-10	Spotlight switch . . . . .	1-20	1-108-28
Shock absorber component parts . . .	17-26, 17-27	17-26-2 to 17-26-75	Spring, brake pedal pull-back. . . . .	5-28	5-34-1 to 5-34-7
Shoe and facing, brake . . . . .	5-16 to 5-20	5-03-1 to 5-03-33	Spring, brake shoe guide . . . . .	5-26	5-26-1 to 5-26-4
Shroud, fan . . . . .	7-8	7-08-2	Spring, carburetor . . . . .	14-13, 14-14	14-36-1 to 14-36-29
Shuttle valve . . . . .	21-49	21-122-5 to 21-122-11	Spring, clutch pressure . . . . .	6-8, 6-9	6-16-1
Signal switch . . . . .	8-46	8-58-60 to 8-58-94	Spring, hand brake pull back . . . . .	4-9	4-19-1 to 4-19-5
Sill, body . . . . .	23-33	23-51-5 to 23-51-7	Spring, master cylinder piston return . . . . .	5-30	5-46-1
Sleeve, clutch release bearing . . . .	23-49 6-9	23-51-59 6-20-2 to 6-20-17	Spring, throttle return. . . . .	14-6	14-06-1 to 14-06-10
Sleeve and gear, clutch (3 speed). . . . .	21-15	21-14-2 to 21-14-21	Spring and bushing, front . . . . .	17-5	17-01-2 to 17-01-17
(4 speed). . . . .	21-20, 21-21	21-14-1 to 21-14-20	Spring and bushing, rear . . . . .	17-10	17-11-1 to 17-11-35
(5 speed). . . . .	21-34, 21-35	21-14-5 to 21-14-20	Sprocket camshaft . . . . .	9-13	9-17-5 to 9-17-20
Sliding clutch gear . . . . .	3-65	3-50-1	Sprocket, crankshaft . . . . .	9-9	9-08-5
Sliding clutch shaft. . . . .	3-65	3-49-2 to 3-49-9	Standard parts . . . . .	18-1	-----
Sliding clutch shifter fork . . . . .	3-65	3-51-2 to 3-51-22	Starting motor . . . . .	8-39, 8-44	8-52-4 to 8-52-502
Solenoid, kickdown (4 speed) . . . . .	21-30, 21-31	21-79-3 to 21-79-9	Steering gear . . . . .	19-4 to 19-6	19-01-5 to 19-01-34
Spare tire carrier lock . . . . .	22-25	22-48-4 to 22-48-14	Steering gear arm . . . . .	19-13, 19-14	19-27-2 to 19-27-36
Speedometer adapter . . . . .	21-47, 21-48	21-86-5 to 21-86-53	Steering gear bracket . . . . .	19-8, 19-9	19-12-1 to 19-12-13
Speedometer cable . . . . .	21-44	21-84-1 to 21-84-15	Steering gear column jacket. . . . .	19-9, 19-10	19-14-1 to 19-14-74
			Steering gear grease retaining tube . . . . .	19-9	19-13-2
			Steering gear housing . . . . .	19-6, 19-7	19-02-4 to 19-02-17
			Steering gear housing cover. . . . .	19-7, 19-8	19-04-1 to 19-04-13



PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Take-off power (5 speed)	21-32, 21-33	21-08-1 to 21-08-3	Trim moulding	23-29	23-26-23 to 23-26-26
Tank, booster brake vacuum supply	5-44	5-102-2 to 5-102-6	Trimming material	23-45	23-114-15
Tank, fuel	14-25 to 14-29	14-86-1 to 14-86-60	Tube, air brake air pressure governor	5-49	5-123-2
Tappet, valve	9-24	9-41-4 to 9-41-24	Tube, air brake control valve	5-47, 5-48	5-116-3 to 5-116-25
Tee, booster brake tube	5-46	5-110-13 to 5-110-15	Tube, air brake pressure gauge	5-48	5-118-5
Tee, brake tube	5-33	5-58-1 to 5-58-3	Tube, air compressor	5-48, 5-49	5-120-1 to 5-120-27
Thermostat	7-17	7-41-4 to 7-41-28	Tube, booster brake	5-45, 5-46	5-107-1 to 5-107-19
Thermostat, manifold heat control valve	9-29	9-58-1 to 9-58-14	Tube, camshaft gear or sprocket oil	9-13, 9-14	9-19-3
Throttle control ball joint	14-7	14-13-1	Tube, carburetor	14-17	14-44-1 to 14-44-5
Throttle control bell crank	14-7 to 14-9	14-14-1 to 14-14-24	Tube, frame brake	5-30 to 5-32	5-53-7 to 5-53-38
Throttle control button and wire	14-9	14-24-2 to 14-24-11	Tube, master cylinder brake	5-30	5-52-10 to 5-52-19
Throttle control guide and housing	14-9	14-25-6 to 14-25-7	Tube, oil filter	10-10, 10-11	10-27-1 to 10-27-29
Throttle control hand lever	14-9	14-17-1	Tube, oil gauge	10-6	10-05-4 to 10-05-18
Throttle control wire tube bracket	14-9	14-26-1 to 14-26-2	Tube, oil pump outlet	10-7	10-16-4 to 10-16-15
Throttle return spring	16-6	14-06-1 to 14-06-10	Tube, rear axle brake	5-32	5-54-1
Timing chain	9-14	9-20-1	Tube, steering gear grease retaining	19-9	19-13-2
Tire carrier	22-24, 22-25	22-19-1 to 22-19-29	Tube, upper to lower wheel cylinder	5-32	5-55-1
Toe board	23-19 to 23-21	23-04-4 to 23-04-224	Tube and hose, fuel pump	14-24, 14-25	14-85-1 to 14-85-27
Tow hook	13-11	13-61-2	Tube and hose, radiator	7-10, 7-11	7-14-1 to 7-14-26
Transmission	21-12 to 21-14	21-02-1	Tube and worm, steering gear	19-10, 19-11	19-15-1 to 19-15-69
Transmission case (3 speed)	21-15	21-03-1	Tubing, fuel tank	14-32	14-89-15 to 14-89-57
Transmission case (4 speed)	21-18, 21-19	21-03-1 to 21-03-25			
Transmission case (5 speed)	21-30, 21-31	21-03-1 to 21-03-15			
Transmission package	21-12	21-01-1 to 21-01-21			
Trim, front seat	21-43, 23-44	23-108-2 to 23-108-16			

U

Underslung tire carrier	22-23, 22-24	22-12-1 to 22-12-131
Union and clips, fuel tube	14-33	14-90-1 to 14-90-20
Unit, fuel gauge tank	14-20, 14-21	14-72-1 to 14-72-47
Universal joint cross	16-19	16-08-6 to 16-08-19
Universal joint cross roller and bushing	16-20	16-10-1 to 16-10-7



PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE
Universal joint package . . . . .	16-19	16-03-1	Washer, windshield . . . . .	1-19	1-82-2
Upper to lower wheel cylinder tube. . .	5-32	5-55-1			to
Utility light . . . . .	1-10	1-15-1			1-82-39
			Water pump . . . . .	7-17	7-42-1
					to
Utility light switch . . . . .	1-10	1-15-3			7-42-4
			Water pump body . . . . .	7-17,	7-43-1
				7-18	to
					7-43-17
			Water pump body cover plate . . . . .	7-18	7-44-2
					to
					7-44-6
			Water pump by-pass elbow . . . . .	7-19	7-48-12
					to
			Water pump seal . . . . .	7-19	7-48-57
					to
					7-46-1
			Water pump shaft and impeller . . . . .	7-18,	7-46-13
				7-19	to
					7-45-2
					to
			Weatherstrip . . . . .	23-34,	7-45-54
				23-35	to
					23-63-33
			Weight, wheel balance . . . . .	22-22	to
			Welt, body . . . . .	23-44,	23-63-133
				23-45	to
					22-09-1
			Welt, front fender . . . . .	12-3,	23-113-12
				12-4	to
					12-02-5
			Welt, rear fender . . . . .	12-9	to
					12-02-15
					12-20-4
					to
			Wheel . . . . .	22-4	12-20-8
					to
					22-01-5
					to
			Wheel, steering . . . . .	19-14	19-30-4
					to
					19-30-18
			Wheel balance weight . . . . .	22-22	22-09-1
			Wheel brake adjuster . . . . .	5-25	22-09-1
			Wheel brake diaphragm . . . . .	5-40	5-20-1
					to
					5-95-8
					to
			Wheel brake drum . . . . .	22-10,	5-95-12
				22-11	to
					22-04-1
					to
			Wheel cylinder . . . . .	5-34,	22-04-29
				5-35	to
					5-64-1
					to
			Wheel cylinder bleeder . . . . .	5-36	5-64-5
			Wheel cylinder boot . . . . .	5-36	5-67-1
			Wheel cylinder package . . . . .	5-33,	5-69-1
				5-34	to
					5-63-1
					to
			Wheel cylinder piston . . . . .	5-36,	5-63-3
				5-37	to
			Wheel cylinder piston cup . . . . .	5-37	5-70-1
					to
					to
					5-71-1
					to
					5-71-2
			Wheel cylinder piston cup expander . .	5-39	to
			Wheel hub . . . . .	22-12	5-72-1
					to
					22-05-1
					to
					22-16
			Wheel rim . . . . .	22-22,	22-05-45
				22-23	to
					22-11-3
					to
					22-11-44

