

CODE	PART NAME AND DESCRIPTION	SERIES NO.	MODEL CODES													PART NO.				
			B	C	D	E	G	H & HH	FM	GM	HM & HHM	J	JM	K	KM		R	T	V	Y
GASKETS																				
(Use as follows)																				
ACCESSORIES																				
1-25-26	Directional Signal Lamp Mounting (use with flush mounted lamp) . .	-	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1263 503	
1-25-30	Directional Signal Lamp Face and Back Plate Mounting	-	★	★	★	★	★	★	★	★	★	★	★	★	★	★	★	★	1264 078	
1-39-3	Fuel Tank Locking Cap (key type)	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1329 268	
	Fuel Tank Locking Cap (electric type)	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1343 331	
1-43-9	Brake Holder Control Outlet Plug .	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1264 028	
1-34-10	Brake Holder Control Inlet Plug .	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1264 029	
1-48-89	Heater Core Tube (Model 70)	-	1	1	1	1	1	1	-	-	-	1	-	1	-	1	1	1	1343 298	
1-48-527	Heater to Dash Mounting (Model 504),	-	1	1	1	1	1	1	-	-	-	1	-	1	-	-	-	-	1394 958	
1-48-608	Heater Motor Mounting (Models 61, 62 and 65)	-	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	981 514	
1-53-19	Fresh Air Shut-Off Valve	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1195 702	
1-82-37	Windshield Washer Nozzle Tube . .	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1257 672	
1-108-7	Spotlight Lens (Models S-4 and S-5 without sealed beam unit) . .	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1188 408	
1-108-25	Spotlight Outside Mounting Bracket	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1261 058	
AXLE - FRONT																				
2-04-11	King Pin Cover (8000 axle)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	2	2	2	1267 400
AXLE - REAR																				
3-02-6	Rear Axle Housing Cover	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1188 262
	Rear Axle Housing Cover (Hypoid Axle)	-	-	-	-	1	1	1	1	1	1	1	1	-	-	-	-	-	-	563 617
	Rear Axle Housing Cover (2 Speed Axle)	-	-	-	-	1	1	1	1	1	1	1	1	-	-	-	-	-	-	579 033
	Rear Axle Housing Cover (2 Speed Axle)	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	-	-	-	921 598
3-02-14	Rear Axle Housing Drain Plug	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1116 246
	Rear Axle Housing Drain Plug (Hypoid Axle)	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	-	-	-	56 155
	Rear Axle Housing Cover Drain Plug	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	56 155
3-03-11	Differential and Carrier Inspection Hole Cover (Double Reduction and 2 Speed Axles)	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	1192 199
	Differential and Carrier (Double Reduction and 2 Speed Axles) (all except H-300 Series Axle) (see Note 1 Group 3)	2, 3, 4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1192 199
3-03-25	Differential and Carrier	-	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1318 011
	Differential and Carrier	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	929 877
	Differential and Carrier (Hypoid Axle)	-	-	-	-	1	1	1	1	1	1	1	1	-	-	-	-	-	-	1089 494
	Differential and Carrier (2 Speed Axle)	-	-	-	-	1	1	1	1	1	1	1	1	-	-	-	-	-	-	596 814
	Differential and Carrier (Hypoid Axle)	2	-	-	-	-	-	-	-	-	-	-	-	1	1	-	-	-	-	1191 731

★ Indicates use as required.

□ Indicates parts not listed in any previous parts books.

Series No. (1 indicates B-1 Series) (2 indicates B-2 Series) (3 indicates B-3 Series) (4 indicates B-4 Series)

Where no Series No. is shown part is for B-1, B-2, B-3 and B-4 Series.

Prices and specifications subject to change without notice.

CODE	PART NAME AND DESCRIPTION	SERIES NO.	MODEL CODES													PART NO.			
			B	C	D	F	G	H & HH	FM	GM	HM & HHM	J	JM	K	KM		R	T	V
AXLE - REAR - Cont'd																			
3-03-25	Differential and Carrier (2 Speed Axle)	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	-	-	921 599
	Differential and Carrier	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	1191 731
	Differential and Carrier (H-100 and H-300 Series Axles) (see note 1 Group 3)	2, 3, 4	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	1191 731
	Differential and Carrier (H-120, H-320, L-100, L-200 and L-300 Series Axles) (see note 1 Group 3)	2, 3, 4	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	1191 958
	Differential and Carrier	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	1191 958
	Differential and Carrier	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1192 575
3-03-30	Differential and Carrier Cover (Double Reduction Axle)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1192 789
3-03-52	Differential and Carrier Oil Distributor (2 Speed Axle)	-	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	585 726
3-13-9	Differential Spiral Pinion or Shaft Bearing Retainer (Double Reduction and 2 Speed Axles)	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	1192 136
	Differential Spiral Pinion or Shaft Bearing Retainer (Double Reduction and 2 Speed Axles)	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	1192 214
	Differential Spiral Pinion or Shaft Bearing Retainer (Double Reduction and 2 Speed Axles)	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	1192 749
3-19-9	Drive Pinion Carrier (Double Reduction and 2 Speed Axles)	1	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	1192 118
	Drive Pinion Carrier (Double Reduction and 2 Speed Axles)	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	1192 227
	Drive Pinion Carrier (Double Reduction and 2 Speed Axles)	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	1192 780
3-22-103	Drive Pinion Front Bearing Cover (Hypoid Axle)	2, 3, 4	-	-	-	-	-	-	-	-	-	-	-	1	1	-	-	-	1191 747
	Drive Pinion Front Bearing Cover (Hypoid Axle)	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	1191 747
	Drive Pinion Front Bearing Cover (Hypoid Axle) (H-100 Series Axle) (see note 1 Group 3)	2, 3, 4	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	1191 747
	Drive Pinion Front Bearing Cover (Hypoid Axle) (H-120 and L-100 Series Axles) (see note 1 Group 3)	2, 3, 4	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	-	1191 899
	Drive Pinion Front Bearing Cover (Hypoid Axle)	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	1191 899
	Drive Pinion Front Bearing Cover (Hypoid Axle)	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	1192 475
	Drive Pinion Front Bearing Cover (Hypoid Axle) (Q-100 Series Axles) (see note 1 Group 3)	2, 3, 4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1192 475
	Drive Pinion Front Bearing Cover (Hypoid Axle) (R-100 Series) (see note 1 Group 3)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1267 734
3-31-32	Vacuum Shift Diaphragm	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	1190 693
	Vacuum Shift Diaphragm Bracket	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1192 789
3-31-57	Vacuum Control Valve to Axle Shift Diaphragm Tube	-	-	-	4	4	4	4	4	4	4	4	4	4	4	4	4	4	1193 156
3-31-73	Manifold to Vacuum Shift Control Valve Tube	-	-	-	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1193 156
3-36-1	Drive Shaft Flange	-	-	2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	915 565

★Indicates use as required.

ElIndicates parts not listed in any previous parts books.

Series No. (1 indicates B-1 Series) (2 indicates B-2 Series) (3 indicates B-3 Series) (4 indicates B-4 Series)

Where no Series No. is shown part is for B-1, B-2, B-3 and B-4 Series.

December 31, 1952

Prices and specifications subject to change without notice.

Printed in U.S.A.

CODE	PART NAME AND DESCRIPTION	SERIES NO.	MODEL CODES																PART NO.	
			B	C	D	F	G	H & HH	FM	GM	HM & HHM	J	JM	K	KM	R	T	V		Y
AXLE - REAR - Cont'd																				
3-36-1	Drive Shaft Flange	-	-	-	-	2	2	2	2	2	2	2	2	2	2	-	-	-	-	565 911
	Drive Shaft Flange	-	-	-	-	-	-	-	-	-	-	-	-	-	-	4	-	-	-	1191 796
	Drive Shaft Flange	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	4	-	-	1191 909
	Drive Shaft Flange	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	4	-	1192 577
	Drive Shaft Flange (Q-100, Q-200 and Q-300 Series Axles) (see note 1 Group 3)	2, 3, 4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	4	4	1192 577
	Drive Shaft Flange (R-100, R-200 and R-300 Series Axles) (see note 1 Group 3)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	4	1167 751
3-51-20	Sliding Clutch Shifter Fork Hole Cover	-	-	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	597 133
HAND - BRAKE																				
4-29-2	Hand Brake Support	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	579 234
BRAKE - SERVICE																				
5-39-23	Master Cylinder Cover Screw . .	-	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	51 019
5-39-24	Master Cylinder Cover (Hydraulic Brakes)	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	622 865
5-62-7	Brake Flexible Front Hose (Hydraulic Brakes)	-	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1123 332
	Brake Flexible Rear Hose (Hydraulic Brakes)	-	2	2	2	2	2	2	2	2	2	-	-	-	-	-	-	-	-	1123 332
	Brake Flexible Rear Hose (Hydraulic Brakes)	1, 2, 3	-	-	-	-	-	-	-	-	-	2	2	2	2	-	-	-	-	200 515
	Brake Flexible Rear Hose (Hydraulic Brakes)	4	-	-	-	-	-	-	-	-	-	2	2	2	2	-	-	-	-	1123 332
	Brake Flexible Rear Hose (Hydraulic Brakes)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	2	2	2	2	200 515
5-66-12	Rear Wheel Cylinder Inlet Con- nection Bolt (Hydraulic Brakes) .	-	-	-	2	2	2	2	2	2	2	-	-	-	-	-	-	-	-	857 309
	Rear Wheel Cylinder Inlet Con- nection Bolt (Hydraulic Brakes) .	1, 2, 3	-	-	-	-	-	-	-	-	-	2	2	2	2	-	-	-	-	200 514
	Rear Wheel Cylinder Inlet Con- nection Bolt (Hydraulic Brakes) .	4	-	-	-	-	-	-	-	-	-	2	2	2	2	-	-	-	-	857 309
	Rear Wheel Cylinder Inlet Con- nection Bolt (Hydraulic Brakes) .	-	-	-	-	-	-	-	-	-	-	-	-	-	-	2	2	2	2	200 514
5-100-17	Booster Brake Cylinder Vacuum Chamber Body to Slave Cylinder (Hydraulic Brakes)	-	-	-	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1191 148
5-100-56	Booster Brake Cylinder Piston Rod Rear Seal Retainer (Hydraulic Brakes)	-	-	-	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1191 153
5-103-7	Booster Cylinder Vacuum Valve Cover (Hydraulic Brakes)	-	-	-	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1191 163
5-103-34	Booster Cylinder Vacuum Valve Cap (Hydraulic Brakes)	-	-	-	-	1	1	1	1	1	1	1	1	1	1	1	-	-	-	1263 916
5-105-4	Booster Brake Check Valve Tube (Hydraulic Brakes)	-	-	-	-	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1193 156
5-107-14	Booster Brake Vacuum Supply Tank Tube	-	-	-	-	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1193 156
5-107-19	Booster Brake Manifold to Check Valve Tube	-	-	-	-	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1193 156

★Indicates use as required.

Prices and specifications subject to change without notice.

□Indicates parts not listed in any previous parts books.

Series No. (1 indicates B-1 Series) (2 indicates B-2 Series) (3 indicates B-3 Series) (4 indicates B-4 Series)

Where no Series No. is shown part is for B-1, B-2, B-3 and B-4 Series.

CODE	PART NAME AND DESCRIPTION	SERIES NO.	MODEL CODES													PART NO.				
			B	C	D	F	G	H & HH	FM	GM	HM & HHM	J	JM	K	KM		R	T	V	Y
BRAKE - SERVICE - Cont'd																				
5-113-8	Booster Breather Air Cleaner (Hydraulic Brakes)	-	-	-	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	B1392 937
COOLING																				
7-12-4	Radiator Filler Cap	1, 2	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	920 746
7-41-16	Thermostat	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	863 220
	Thermostat (up to engine No. T172-100902)	2	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	863 220
	Thermostat	1, 2	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	863 220
	Thermostat	-	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	863 220
	Thermostat	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	1111 011
7-44-3	Water Pump Body Cover Plate	-	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	1326 324
	Water Pump Body Cover Plate	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	1122 828
7-44-4	Water Pump Body Cover Plate	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	Pump to Block	-	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	1326 325
	Water Pump Body Cover Plate	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	1122 830
7-44-6	Water Pump Body Cover Plate	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	Screw	-	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	51 019
7-48-16	Water Pump By-Pass Elbow	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	622 772
	Water Pump By-Pass Elbow (up to engine No. T172-100902)	2	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	622 772
	Water Pump By-Pass Elbow	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	622 772
	Water Pump By-Pass Elbow	1, 2	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	622 772
	Water Pump By-Pass Elbow	-	-	-	-	-	-	-	-	-	-	-	-	-	2	2	2	2	-	1122 832
ELECTRICAL																				
8-27-95	Distributor Bracket to Base (for 1233 564 distributor)	1, 2	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1261 004
8-27-314	Distributor Vacuum Chamber Plug (for 1233 564 and 1343 554 distributors)	1, 2, 4	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	691 707
8-27-315	Distributor Vacuum Chamber to Bracket (for 1233 564 distributor)	1, 2	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1261 006
8-29-112	Generator Comutator End Cover (for 1194 650 generator)	2	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	674 931
	Generator Comutator End Cover (for 853 770 generator)	1	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	695 627
	Generator Comutator End Cover (for 1136 934 generator)	-	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	1253 355
	Generator Comutator End Cover (for 1136 931 generator)	-	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	960 170
	Generator Comutator End Cap Cover (for 583 178 generator)	1	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	-	924 102
	Generator Comutator End Cap Cover (for 958 183 generator)	1	-	-	-	1	1	1	1	1	1	1	1	1	-	-	-	-	-	674 931
	Generator Comutator End Cap Cover (for 595 316 generator)	1	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	-	695 627
	Generator Comutator End Cap Cover (for 1262 334 and 1264 054 generators)	2	1	1	1	-	-	-	-	-	-	-	-	-	1	1	1	1	-	1253 355
	Generator Comutator End Cap Cover (for 1263 554 generator)	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	960 170
8-29-148	Generator Drive End (for 583 178 generator)	1	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	-	599 165

★Indicates use as required.

Prices and specifications subject to change without notice.

□Indicates parts not listed in any previous parts books.

Series No. (1 indicates B-1 Series) (2 indicates B-2 Series) (3 indicates B-3 Series) (4 indicates B-4 Series)

Where no Series No. is shown part is for B-1, B-2, B-3 and B-4 Series.

Printed in U.S.A.

CODE	PART NAME AND DESCRIPTION	SERIES NO.	MODEL CODES														PART NO.		
			B	C	D	F	G	H&HH	FM	GM	HM&HHM	J	JM	K	KM	R		T	V
ELECTRICAL - Cont'd																			
8-29-157	Generator Drive End Bearing Retainer (for 1257 392 and 1136 934 generator)	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1253 362
	Generator Drive End Bearing Retainer (for 1262 334 generator)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1266 522
	Generator Drive End Bearing Retainer (for 1264 054 generator)	2, 3, 4	1	1	1	1	1	1	-	1	1	1	1	1	-	-	-	-	1253 362
8-32-183	Horn Diaphragm	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	863 141
8-34-15	Headlamp Mounting	-	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1310 488
8-36-115	Spark Plug	-	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	150 189
8-37-92	Instrument Bezel	1, 2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1195 749
	Instrument Bezel (Flat Face Cowl)	3, 4	1	1	1	1	1	1	-	1	1	1	1	1	1	1	1	1	1195 749
	Instrument Bezel (except Flat Face Cowl)	3, 4	1	1	1	1	1	1	-	1	1	1	1	1	1	1	1	1	1272 327
8-37-161	Instrument Dial Plate	1, 2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1195 751
	Instrument Dial Plate (Flat Face Cowl)	3, 4	1	1	1	1	1	1	-	1	1	1	1	1	1	1	1	1	1195 751
8-37-212	Instruments Mounting	1, 2	★	★	★	★	★	★	★	★	★	★	★	★	★	★	★	★	1262 312
	Instruments Mounting (Flat Face Cowl)	3, 4	1	1	1	1	1	1	-	1	1	1	1	1	1	1	1	1	1262 312
	Instruments Mounting (except Flat Face Cowl)	3, 4	1	1	1	1	1	1	-	1	1	1	1	1	1	1	1	1	1272 331
8-37-388	Speedometer Bezel	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1262 973
8-37-412	Speedometer Dial Glass Mounting	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1262 971
8-50-61	Directional Signal Lamp Mounting (flush mounted)	-	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1263 503
8-50-69	Directional Signal Lamp Face or Back Plate Mounting	-	★	★	★	★	★	★	★	★	★	★	★	★	★	★	★	★	1264 078
8-50-308	Parking Lamp Mounting	1, 2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1193 361
8-50-338	Parking Lamp Lens	1, 2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1193 330
	Parking Lamp Lens	3, 4	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1272 362
8-55-8	Tail Lamp Mounting (Panel)	3, 4	★	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1271 221
8-55-214	Tail Lamp Lens (Panel)	1, 2	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	300 133
	Tail Lamp Lens (Panel)	3, 4	★	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1271 222
	Tail Lamp Lens (except Panel)	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	300 133
8-55-225	Tail Lamp Reflector (Panel)	3, 4	★	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1244 982
8-55-237	Tail Lamp License Lens	1, 2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	300 138
	Tail Lamp License Lens (except Panel)	3, 4	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	300 138
8-57-56	License Lamp Lens (Panel)	3, 4	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1271 161
ENGINE																			
9-01-5	Engine Gasket Set Complete	1, 2	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1325 983
	Engine Gasket Set, (Domestic)	3, 4	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1325 975
	Engine Gasket Set, (Export)	3, 4	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1325 983
	Engine Gasket Set	-	-	-	-	1	1	1	1	1	1	1	1	1	-	-	-	-	1243 636
	Engine Gasket Set	1	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	1311 029
	Engine Gasket Set	2	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	E1326 187
	Engine Gasket Set (up to engine No. T188-1395)	2	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	1311 029
	Engine Gasket Set (after engine No. T188-1395)	2	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	E1326 187
	Engine Gasket Set (use with single carburation system)	3, 4	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	E1326 187
9-02-26	Cylinder Block Vacuum Pump Pad Cover	1, 2	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	671 150

★ Indicates use as required.

E Indicates parts not listed in any previous parts books.

Series No. (1 indicates B-1 Series) (2 indicates B-2 Series) (3 indicates B-3 Series) (4 indicates B-4 Series)

Where no Series No. is shown part is for B-1, B-2, B-3 and B-4 Series.

Prices and specifications subject to change without notice.

CODE	PART NAME AND DESCRIPTION	SERIES NO.	MODEL CODES													PART NO.				
			B	C	D	F	G	H & HH	FM	GM	HM & HHM	J	JM	K	KM		R	T	V	Y
ENGINE - Cont'd																				
9-02-29	Cylinder Block Distributor Pilot Hole Cover	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	864 599
9-02-33	Cylinder Block Oil Filter Pad Cover	3,4	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	1142 714
9-03-5	Cylinder Head	1	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1117 542
	Cylinder Head	2	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1117 542
9-03-5	Cylinder Head (up to engine No. T-172-100902)	2	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1117 542
	Cylinder Head (after engine No. T-172-100902)	2	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1326 318
9-03-5	Cylinder Head (standard)	3,4	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1326 319
	Cylinder Head (for use with low compression head) (Export)	3,4	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1326 318
9-03-5	Cylinder Head	-	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	1324 340
	Cylinder Head	1	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	-	1122 794
9-03-5	Cylinder Head	2,3,4	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-	1142 707
	Cylinder Head (up to engine No. T188-1395)	2	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	-	1122 794
9-03-5	Cylinder Head (after engine No. T188-1395)	2	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	-	1142 707
	Cylinder Head	3,4	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	-	1142 707
9-03-5	Cylinder Head	2,3	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	1142 926
	Cylinder Head	4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	E1483 669
9-05-6	Cylinder Water Outlet Elbow	-	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	50 082
9-10-22	Cylinder Water Outlet Elbow	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	1111 009
	Crankshaft Bearing Cap, Left	-	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	954 392
9-10-22	Crankshaft Bearing Cap, Right	-	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	954 393
	Crankshaft Bearing Cap, Left	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	863 013
9-10-22	Crankshaft Bearing Cap, Right	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	863 012
	Crankshaft Bearing Cap, Left	1,2	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	1116 709
9-10-22	Crankshaft Bearing Cap, Left	3	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	1116 709
	Crankshaft Bearing Cap, Left	3	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	863 013
9-10-22	Crankshaft Bearing Cap, Left	4	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	863 013
	Crankshaft Bearing Cap, Right	1,2	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	1116 708
9-10-22	Crankshaft Bearing Cap, Right	3	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	1116 708
	Crankshaft Bearing Cap, Right	3	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	863 012
9-10-22	Crankshaft Bearing Cap, Right	4	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	863 012
	Crankshaft Bearing Cap	-	-	-	-	-	-	-	-	-	-	-	-	-	2	2	2	2	-	318 602
9-11-6	Crankshaft Rear Bearing Oil Seal	-	2	2	2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	633 298
9-23-13	Chain Case Cover Screw	-	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	114 622
9-23-17	Chain Case Cover	-	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	1122 450
	Chain Case Cover	1,2	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	684 306
9-23-17	Chain Case Cover	3	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	684 306
	Chain Case Cover	3	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	671 174
9-23-17	Chain Case Cover	4	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	671 174
	Chain Case Cover Oil Seal	-	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	1088 603
9-24-7	Chain Case Cover Plate	-	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	695 441
	Chain Case Cover Plate	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	671 176
9-24-11	Chain Case Cover Plate Screw	-	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	114 622
9-24-13	Chain Case Cover Plate Governor Opening Cover	1,2	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	1124 227
	Valve Grind Gasket Package	1,2	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1325 984
9-39-1	Valve Grind Gasket Package (Domestic)	3,4	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1325 976
	Valve Grind Gasket Package (Export)	3,4	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1325 984
9-39-1	Valve Grind Gasket Package	-	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	1064 735

★Indicates use as required.

□Indicates parts not listed in any previous parts books.

Series No. (1 indicates B-1 Series) (2 indicates B-2 Series) (3 indicates B-3 Series) (4 indicates B-4 Series)

Where no Series No. is shown part is for B-1, B-2, B-3 and B-4 Series.

Prices and specifications subject to change without notice.

CODE	PART NAME AND DESCRIPTION	SERIES NO.	MODEL CODES																PART NO.	
			B	C	D	F	G	H & HH	FM	GM	HM & HHM	J	JM	K	KM	R	T	V		Y
ENGINE - Cont'd																				
9-39-1	Valve Grind Gasket Package	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	1243 793
	Valve Grind Gasket Package	2, 3, 4	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	1321 074
	Valve Grind Gasket Package (up to engine No. T188-1395)	2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	1243 793
	Valve Grind Gasket Package (after engine No. T188-1395)	2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	1321 074
	Valve Grind Gasket Package	3, 4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	1321 074
	Valve Grind Gasket Package	2, 3	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1321 110
	Valve Grind Gasket Package	4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1450 315
9-40-1	Valve Spring Cover Gasket Set	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	980 583
	Valve Spring Cover Gasket Set	-	-	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	980 584
9-40-4	Valve Spring Cover	-	-	-	-	-	-	-	-	-	-	-	-	-	-	2	2	2	2	1122 815
9-40-13	Valve Spring Cover Screw	-	4	4	4	4	4	4	4	4	4	4	4	4	4	-	-	-	-	693 959
9-46-26	Fluid Drive Filter Plug	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	863 987
9-46-60	Fluid Drive Seal Ring	2, 3, 4	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1320 556
9-46-63	Fluid Drive Seal Housing	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	854 011
9-48-49	Exhaust Manifold to Exhaust Pipe Adapter (see note 2)	2, 3, 4	-	-	-	-	-	-	-	-	-	-	-	-	-	2	2	2	2	1312 132
9-50-1	Manifold Gasket Set	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	780 460
	Manifold Gasket Set	-	-	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	780 462
	Manifold Gasket Set (see note 3)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	1243 794
	Manifold Gasket Set (see note 4)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	1321 111
9-50-2	Intake and Exhaust Manifold (one piece gasket)	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	854 395
	Intake and Exhaust Manifold (center)	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	601 275
	Intake and Exhaust Manifold (end)	-	4	4	4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	318 042
	Intake and Exhaust Manifold (one piece gasket)	-	-	-	-	1	1	1	1	1	1	1	1	1	-	-	-	-	-	854 396
	Intake and Exhaust Manifold (center)	-	-	-	-	1	1	1	1	1	1	1	1	1	-	-	-	-	-	666 353
	Intake and Exhaust Manifold (end)	-	-	-	-	4	4	4	4	4	4	4	4	4	-	-	-	-	-	666 354
	Intake and Exhaust Manifold (see note 3)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	1122 860
	Intake and Exhaust Manifold (see note 4)	2, 3, 4	-	-	-	-	-	-	-	-	-	-	-	-	-	2	2	2	2	1122 860
9-50-3	Intake to Exhaust Manifold	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	601 420
	Intake to Exhaust Manifold	-	-	-	-	1	1	1	-	-	1	-	1	-	-	-	-	-	-	666 352
	Intake to Exhaust Manifold	-	-	-	-	-	-	-	1	1	1	-	1	-	1	-	-	-	-	1138 033
	Intake to Exhaust Manifold (see note 3)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	1122 859
9-50-6	Intake Manifold (see note 3)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	2	2	2	-	1122 858
9-50-12	Intake Manifold Equalizer Pipe (see note 4)	2, 3, 4	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	1142 965
ENGINE OILING																				
10-01-11	Breather Pipe	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	1088 013
10-02-17	Crankcase Ventilator Outlet Pipe	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	301 034
10-07-11	Oil Pump Body	-	1	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	695 442
10-08-3	Oil Pump Cover	-	1	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	1124 984
10-22-41	Oil Pressure Relief Valve Cap	-	1	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	618 622
	Oil Pressure Relief Valve Cap	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	55 201
10-24-1	Oil Pan Gasket Set	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	933 438
	Oil Pan Gasket Set	-	-	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	1243 628
10-24-5	Oil Pan, Left	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	600 759
	Oil Pan, Right	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	600 758
	Oil Pan, Left	-	-	-	-	1	1	1	1	1	1	1	1	1	-	-	-	-	-	1138 886

★ Indicates use as required.

Prices and specifications subject to change without notice.

☐ Indicates parts not listed in any previous parts books.

Series No. (1 indicates B-1 Series) (2 indicates B-2 Series) (3 indicates B-3 Series) (4 indicates B-4 Series)

Where no Series No. is shown part is for B-1, B-2, B-3 and B-4 Series.

CODE	PART NAME AND DESCRIPTION	SERIES NO.	MODEL CODES													PART NO.				
			B	C	D	F	G	H & HH	FM	GM	HM & HHM	J	JM	K	KM		R	T	V	Y
ENGINE OILING - Cont'd																				
10-24-5	Oil Pan, Right	-	-	-	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	665 802
10-24-6	Oil Pan, Front	-	1	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	866 680
	Oil Pan, Rear	-	1	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	866 680
10-24-8	Oil Pan	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	670 460	
10-24-38	Oil Pan Drain Plug	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	105 456	
10-26-27	Oil Filter Cover (DeLuxe-heavy duty filter)	-	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	685 625	
		-	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	685 625	
	Oil Filter Cover (Model P-903 filter)	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	1193 504	
10-26-33	Oil Filter Drain Plug	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	1111 718	
EXHAUST																				
11-06-8	Exhaust Pipe Flange	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	623 361	
	Exhaust Pipe Flange	-	-	-	-	1	1	1	1	1	1	1	1	1	-	-	-	-	683 051	
	Exhaust Pipe Flange (use with single carburetor)	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	1195 490	
	Exhaust Pipe Flange (use with dual carburetor)	2, 3, 4	-	-	-	-	-	-	-	-	-	-	-	-	2	2	2	2	683 051	
FUEL																				
14-29-5	Carburetor Air Cleaner (for 919 801 and 919 802 air cleaner) .	-	1	1	1	1	1	1	1	1	1	1	1	1	★	★	★	2	952 062	
14-34-2	Carburetor Flange (w/o governor) (use with 1, 2, 3)	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	637 191	
	Carburetor Flange (w/governor) (use with 1, 2, 3)	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	697 695	
	Carburetor Flange (w/o governor) (use with 4, 5, 6, 7, 8, 9, 10, 11, 12, 13)	-	-	-	1	1	1	1	1	1	1	1	1	1	★	★	★	★	637 191	
	Carburetor Flange (w/governor) (use with 4, 5, 6)	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	637 191	
	Carburetor Flange (w/governor) (use with 7, 8, 9, 10, 13)	-	-	-	-	1	1	1	1	1	1	1	1	1	★	★	★	2	662 811	
	Carburetor Flange (w/governor) (use with 11, 12)	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	637 191	
14-34-4	Carburetor Body Flange (use with 1)	-	2	2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	697 711	
	Carburetor Body Flange (use with 2, 3)	-	2	2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1318 512	
	Carburetor Body Flange (use with 4)	-	-	-	2	-	-	-	-	-	-	-	-	-	-	-	-	-	698 857	
	Carburetor Body Flange (use with 5, 6)	-	-	-	2	-	-	-	-	-	-	-	-	-	-	-	-	-	1318 520	
	Carburetor Body Flange (use with 7)	-	-	-	-	2	2	2	-	-	-	2	-	2	-	2	-	-	654 508	
	Carburetor Body Flange (use with 8, 13)	-	-	-	-	2	2	2	-	-	-	2	-	2	-	★	★	★	4 1318 517	
	Carburetor Body Flange (use with 11, 12)	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	1073 086	
14-34-5	Carburetor Main Body (use with 1, 2, 3, 7, 8, 13)	-	1	1	-	1	1	1	-	-	-	1	-	1	-	★	★	★	2 697 712	
	Carburetor Air Horn (use with 4, 5, 6)	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	861 128	
	Carburetor Main Body (use with 9)	-	-	-	-	-	-	1	1	1	-	1	-	1	-	-	-	-	645 652	

★ Indicates use as required.

Prices and specifications subject to change without notice.

□ Indicates parts not listed in any previous parts books.

Series No. (1 indicates B-1 Series) (2 indicates B-2 Series) (3 indicates B-3 Series) (4 indicates B-4 Series)

Where no Series No. is shown part is for B-1, B-2, B-3 and B-4 Series.

Printed in U.S.A.

CODE	PART NAME AND DESCRIPTION	SERIES NO.	MODEL CODES																PART NO.
			B	C	D	F	G	H & HH	FM	GM	HM & HHM	J	JM	K	KM	R	T	V	
FUEL - Cont'd																			
14-34-5	Carburetor Main Body (use with 10)	-	-	-	-	-	-	-	1	1	1	-	1	-	1	-	-	-	1323 831
	Carburetor Main Body (use with 11, 12)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	963 800
14-34-9	Carburetor Main Metering Jet (use with 1, 2, 3, 7, 8, 11, 12, 13)	-	1	1	-	1	1	1	-	-	-	1	-	1	-	★	★	★	651 183
	Carburetor (use with 4, 5, 6)	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	959 238
	Carburetor (use with 9, 10)	-	1	1	-	1	1	1	-	-	-	1	-	1	-	★	★	★	651 185
14-34-12	Carburetor Step-Up Jet (use with 1, 2, 3, 7, 8, 11, 12, 13)	-	1	1	-	1	1	1	-	-	-	1	-	1	-	★	★	★	651 184
14-34-13	Carburetor Step-Up Piston (use with 1, 2, 3, 7, 8, 11, 12, 13)	-	1	1	-	1	1	1	-	-	-	1	-	1	-	★	★	★	651 185
14-34-15	Carburetor Power By-Pass Jet (use with 4, 5, 6)	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	662 431
14-34-16	Carburetor Pump By-Pass Jet (use with 4, 5, 6)	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	662 431
14-34-18	Carburetor Pump Rod (use with 9, 10)	-	-	-	-	-	-	-	1	1	1	-	1	-	1	-	-	-	645 595
14-34-20	Carburetor Valve Jet (use with 4, 5, 6)	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	959 239
14-34-21	Carburetor Float Needle Seat (use with 1, 2, 3, 7, 8, 9, 10, 11, 12, 13)	-	1	1	-	1	1	1	1	1	1	1	1	1	1	★	★	★	645 613
	Carburetor (use with 4, 5, 6)	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	647 093
14-34-24	Carburetor Nozzle (use with 9, 10)	-	-	-	-	-	-	-	1	1	1	-	1	-	1	-	-	-	645 618
14-34-34	Carburetor Main Vent Plug (use with 11, 12)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	963 802
14-34-36	Carburetor Governor Adjusting Screw Seal Plug (use with 11, 12)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1070 746
14-34-37	Carburetor Governor Secondary Spring Seal Plug (use with 11, 12)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1072 959
14-67-4	Fuel Filter Head (Zenith type)	1	1	1	1	1	1	1	1	-	1	1	1	1	1	-	-	-	860 291
	Fuel Filter Bowl	-	1	1	1	1	1	1	1	1	1	1	1	1	1	★	★	★	1320 527
14-72-9	Fuel Gauge Tank Unit (cork) (w/screw type)	-	-	-	-	★	★	★	★	★	★	★	★	★	★	★	★	★	55 985
14-74-1	Fuel Pump Mounting (for 1318 995 and 1318 994 fuel pump)	1, 2	1	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	1117 482
	Fuel Pump Mounting (for 1122 836 fuel pump)	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1125 276
	Fuel Pump Mounting (for 1402 323 fuel pump)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1089 302
	Fuel Pump Mounting (for 1312 586 fuel pump)	-	1	1	1	1	1	1	-	-	-	1	-	1	-	-	-	-	688 481
	Fuel Pump Mounting (for 1407 909 fuel pump)	2, 3, 4	1	1	1	1	1	1	-	1	1	1	1	1	1	-	-	-	1324 919
14-75-4	Fuel Pump Body Oil Seal (fuel section) (for 1312 586 fuel pump)	-	1	1	1	1	1	1	-	-	-	1	-	1	-	-	-	-	699 793
14-76-6	Fuel Pump Bottom Cover (for 1318 995 fuel pump)	1, 2	1	1	1	1	1	1	1	1	-	-	-	-	-	-	-	-	639 148
14-76-12	Fuel Pump Pad Cover (for 1122 836 fuel pump)	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1311 773
14-77-20	Fuel Pump Diaphragm (for 1318 995 and 1318 994 fuel pump)	1, 2	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	639 123
14-78-3	Fuel Pump Valve Plate or Cage (★) (for 1122 836 fuel pump)	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1075 688

★ Indicates use as required.

□ Indicates parts not listed in any previous parts books.

Series No. (1 indicates B-1 Series) (2 indicates B-2 Series) (3 indicates B-3 Series) (4 indicates B-4 Series)

Where no Series No. is shown part is for B-1, B-2, B-3 and B-4 Series.

Prices and specifications subject to change without notice.

CODE	PART NAME AND DESCRIPTION	SERIES NO.	MODEL CODES													PART NO.			
			B	C	D	F	G	H & HH	FM	GM	HM & HHM	J	JM	K	KM		R	T	V
FUEL - Cont'd																			
14-78-5	Fuel Pump Valve Plug and Air Dome (2) (for 1318 995 fuel pump)	1, 2	1	1	1	1	1	1	1	1	1	-	-	-	-	-	-	-	639 099
14-80-5	Fuel Pump Valve Plug and Air Dome (2) (for 1318 994, 1402 323 fuel pump)	2	-	-	-	-	-	-	-	-	1	1	1	1	1	1	1	1	639 100
14-80-5	Fuel Pump Strainer Bowl (cork) (for 1318 995 and 1318 994 fuel pump)	1, 2	1	1	1	1	1	1	1	1	1	1	1	1	-	-	-	-	E1322 695
	Fuel Pump Strainer Bowl (cork) (for 1402 323 and 1407 909 fuel pump)	2, 3, 4	1	1	1	1	1	1	-	1	1	1	1	1	1	1	1	1	E1316 028
14-83-3	Fuel Pump Strainer Bowl (cork) (for 1312 586 fuel pump)	-	1	1	1	1	1	1	-	-	1	-	1	-	-	-	-	-	1314 539
14-83-3	Fuel Pump Vacuum Section Cover Plate (for 1312 586 fuel pump)	-	1	1	1	1	1	1	-	-	1	-	1	-	-	-	-	-	E1400 916
14-83-36	Fuel Pump Vacuum Cover Screw (for 1312 586 fuel pump)	-	1	1	1	1	1	1	-	-	1	-	1	-	-	-	-	-	674 311
14-86-36	Fuel Tank Filter Cap	-	★	★	★	★	★	★	★	★	★	★	★	★	★	★	★	★	556 514
14-86-42	Fuel Tank Filter Tube (w/gallon tank)	-	-	-	-	1	1	1	-	-	1	-	1	-	1	-	-	-	556 514
SPRINGS																			
17-26-9	Shock Absorber Reserve Tube (for 1261 062 and 1270 147 shock absorbers)	-	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1193 655
17-26-23	Shock Absorber Rod Guide Reservoir (for 1194 956, 1196 318, 1166 165, 1166 166, 1266 467 and 1266 468)	-	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	958 375
	Shock Absorber Rod Guide Reservoir (for 1265 820, 1265 821, 1271 820, 1271 932, 1274 149, 1274 151, 1274 153, 1392 037, 1392 039, 1392 041, 1392 043 and 1392 045)	-	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1313 738
STEERING																			
19-04-2	Steering Gear Housing Cover (see note 1)	1, 2	-	-	-	1	1	1	1	1	1	1	1	1	1	1	-	-	1188 667
	Steering Gear Housing Side Cover (see note 3)	3, 4	-	-	-	1	1	1	-	1	1	1	1	1	1	-	-	-	1271 347
	Steering Gear Housing Side Cover (229" W.B. School Bus up to serial No. 81857131, except 81857059, 81857060, 81857079, 81857081)	1, 2	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	926 609
	Steering Gear Housing Side Cover (229" W.B. School Bus after serial No. 81857131 also 81857059, 81857060, 81857079, 81857081)	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	1265 508
	Steering Gear Housing Side Cover (up to serial No. 81795043)	3	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	926 609
	Steering Gear Housing Side Cover (see note 2)	1	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	926 609

★Indicates use as required.

Prices and specifications subject to change without notice.

☐Indicates parts not listed in any previous parts books.

Series No. (1 indicates B-1 Series) (2 indicates B-2 Series) (3 indicates B-3 Series) (4 indicates B-4 Series)

Where no Series No. is shown part is for B-1, B-2, B-3 and B-4 Series.

CODE	PART NAME AND DESCRIPTION	SERIES NO.	MODEL CODES													PART NO.				
			B	C	D	F	G	H & HH	FM	GM	HM & HHM	J	JM	K	KM		R	T	V	Y
STEERING - Cont'd																				
19-04-2	Steering Gear Housing Side Cover (see notes 2 and 4)	2, 3, 4	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	1	1265 508
19-19-28	Steering Gear Shaft Cover Steering Gear Shaft Cover (see note 5)	- 3, 4	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1142 262
			-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	1273 093
TRANSMISSION																				
21-01-1	Transmission Gasket Set Transmission Gasket Package (3 Speed)	4 -	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	E1321 249
	Transmission Gasket Package (4 Speed) (spur type gear)	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1063 658
	Transmission Gasket Package (4 Speed) (helical type gear)	2, 3, 4	1	1	1	1	1	1	-	1	1	-	-	-	-	-	-	-	-	1243 622
	Transmission Gasket Package (5 Speed)	2, 3, 4	-	-	-	1	1	1	-	1	1	1	1	1	-	-	-	-	-	1316 362
	Transmission Gasket Package	1	-	-	-	-	-	-	-	-	-	1	1	1	-	-	-	-	-	1316 363
	Transmission Gasket Package	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	-	1064 619
	Transmission Gasket Package	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	1321 100
21-03-25	Transmission Case Back-Up Light Switch Hole Plug (4 Speed) (for 1326 764 transmission)	4	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	E1302 807
21-08-3	Transmission Power Take-Off (4 Speed) (for 1195 972, 1194 252, 1268 027, 1272 019, 1272 273, 1265 987, 1272 973, 1393 364, 1270 417 and 1393 363 transmissions)	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	-	-	567 500
21-09-33	Transmission Main Drive Gear Retainer (3 Speed) (for 599 750, 1263 859, 1268 021, 1194 971, 1268 031 transmissions)	2, 3, 4	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1090 121
	Transmission Main Drive Gear Retainer (4 Speed) (for 1195 972, 1194, 252, 1268 027, 1272 019, 1272 273, 1265 987, 1272 973, 1393 364, 1270 417 and 1393 363 transmissions)	2, 3, 4	1	1	1	1	-	1	1	1	1	1	-	-	-	-	-	-	-	1090 121
	Transmission Main Drive Gear Retainer (4 Speed) (for 1326 764 transmission)	4	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	864 018
	Transmission Main Drive Gear Retainer (5 Speed) (for 1194 689, 1263 065, 1263 076, 1190 677, 1501 891, 1263 109, 1502 900 and 1263 311 transmissions)	-	-	-	-	-	-	-	-	-	-	1	1	1	1	1	1	1	-	565 303
	Transmission Main Drive Gear Retainer (5 Speed) (for 1265 634, 1272 974, 1266 729 and 1274 648 transmissions)	2, 3, 4	-	-	-	1	1	1	-	1	1	1	1	1	-	-	-	-	-	1090 121
	Transmission Main Drive Gear Retainer (5 Speed) (for 1267 195, 1393 689 and 1270 651 transmissions)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1269 658
21-23-17	Transmission Main Shaft Rear Bearing Retainer (3 Speed) (for 599 750, 1263 859, 1268 021, 1194 971, 1268 031 transmissions)	-	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	579 234

★ Indicates use as required.

Prices and specifications subject to change without notice.

☐ Indicates parts not listed in any previous parts books.

Series No. (1 indicates B-1 Series) (2 indicates B-2 Series) (3 indicates B-3 Series) (4 indicates B-4 Series)

Where no Series No. is shown part is for B-1, B-2, B-3 and B-4 Series.

CODE	PART NAME AND DESCRIPTION	SERIES NO.	MODEL CODES													PART NO.			
			B	C	D	F	G	H & HH	FM	GM	HM & HHM	J	JM	K	KM		R	T	V
TRANSMISSION - Cont'd																			
21-23-17	Transmission Main Shaft Rear Bearing Retainer (4 Speed) (for 1195 972, 1194 252, 1268 027, 1272 019, 1272 273, 1265 987, 1272 973, 1393 364, 1270 417 and 1393 363 transmissions) . . .	-	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	-	1090 129
	Transmission Main Shaft Rear Bearing Retainer (5 Speed) (for 1194 689, 1263 065, 1263 076, 1265 634, 1272 974, 1266 729 and 1274 648 transmissions) . . .	-	-	-	-	1	1	1	-	1	1	1	1	1	1	-	-	-	567 402
	Transmission Main Shaft Rear Bearing Retainer (5 Speed) (for 1190 677, 1263 109 and 1263 311 transmissions)	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	-	572 247
	Transmission Main Shaft Rear Bearing Retainer (5 Speed) (for 1267 195, 1393 689 and 1270 651 transmissions)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1269 680
21-26-4	Transmission Countershaft Front Bearing Retainer (4 Speed) (for 1272 019, 1272 273, 1265 987, 1272 973 and 1393 364 transmissions)	-	2	2	2	2	2	2	-	2	2	2	-	-	-	-	-	-	1266 001
	Transmission Countershaft Rear Bearing (4 Speed) (for 1272 019, 1272 273, 1265 987, 1272 973, 1393 364 and 1393 363 transmissions)	-	1	1	1	1	1	1	-	1	1	-	-	-	-	-	-	-	1266 004
	Transmission Countershaft Front Bearing Retainer (5 Speed) (for 1265 634, 1272 974, 1266 729 and 1274 648 transmissions) . . .	-	-	-	-	2	2	2	-	2	2	2	2	2	2	-	-	-	1265 669
21-27-3	Transmission Countershaft Rear Bearing (4 Speed) (for 1272 019, 1272 273, 1265 987, 1272 973, 1393 364 and 1393 363 transmission)	-	1	1	1	1	1	1	-	1	1	-	-	-	-	-	-	-	1066 004
	Transmission Countershaft Rear Bearing Retainer or Cap (5 Speed) (for 1194 689, 1263 065, 1263 076, 1190 677, 1501 891, 1263 109, 1502 900, 1263 311, 1267 195, 1393 689 and 1270 651 transmissions) . . .	-	-	-	-	-	-	-	-	-	-	1	1	1	1	1	1	1	585 280
	Transmission Countershaft Rear Bearing Retainer or Cap (5 Speed) (for 1265 634, 1272 974 and 1266 729 transmissions)	2, 3, 4	-	-	-	1	1	1	-	1	1	1	1	1	-	-	-	-	1265 675
21-29-9	Transmission Gearshift Cover Tower (5 Speed) (for 1267 195, 1393 689 and 1270 651 transmissions)	4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1269 703
21-29-25	Transmission Gearshift Cover (3 Speed) (for 599 750, 1263 859, 1268 021, 1194 971 and 1268 031 transmission)	1	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	580 203

★Indicates use as required.

□Indicates parts not listed in any previous parts books.

Series No. (1 indicates B-1 Series) (2 indicates B-2 Series) (3 indicates B-3 Series) (4 indicates B-4 Series)

Where no Series No. is shown part is for B-1, B-2, B-3 and B-4 Series.

December 31, 1952

Prices and specifications subject to change without notice.

CODE	PART NAME AND DESCRIPTION	SERIES NO.	MODEL CODES													PART NO.			
			B	C	D	F	G	H & HH	FM	GM	HM & HHM	J	JM	K	KM		R	T	V
TRANSMISSION - Cont'd																			
21-29-25	Transmission Gearshift Cover (4 Speed) (for 1195 972, 1194 252, 1268 027 and 1270 417 transmissions)	-	1	1	1	1	-	1	1	-	1	-	-	-	-	-	-	-	1196 668
	Transmission Gearshift Cover (4 Speed) (for 1272 049, 1272 273, 1265 987, 1272 973, 1393 364 and 1393 363 transmissions)	2, 3, 4	1	1	1	1	1	1	-	1	1	1	-	-	-	-	-	-	1266 012
	Transmission Gearshift Cover (5 Speed) (for 1194 689, 1263 065, 1263 076, 1190 677, 1501 891, 1263 109, 1502 900 and 1263 311 transmissions)	-	-	-	-	-	-	-	-	-	-	1	1	1	1	1	1	1	567 486
	Transmission Gearshift Cover (5 Speed) (for 1265 634, 1272 974, 1266 729 and 1274 648 transmissions)	-	-	-	-	1	1	1	-	1	1	1	1	1	1	-	-	-	1265 683
	Transmission Gearshift Cover (5 Speed) (for 1267 195, 1393 689 and 1270 651 transmissions)	4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1269 701
21-75-6	Transmission Kickdown Governor Mounting (4 Speed) (for 1326 764 transmission)	4	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1113 117
	Transmission Kickdown Governor Cover (4 Speed) (for 1326 764 transmission)	4	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1126 640
21-79-4	Transmission Kickdown Solenoid (4 Speed) (for 1326 764 transmission)	4	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1126 633
21-113-4	Transmission Interruptor Switch	4	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1113 113
21-122-8	Shuttle Valve Plug	4	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	117 819
WHEELS																			
22-07-22	Rear Wheel Bearing Outer Oil Seal Retainer.	-	-	-	2	-	-	-	-	-	-	-	-	-	-	-	-	-	915 565
BODY																			
23-67-49	Windshield Wiper Pivot.	-	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1241 052
23-67-113	Windshield Wiper Cover Plate (electric) (see note 6) (group 23)	1	1	1	1	1	-	1	1	-	1	1	1	1	1	1	1	1	1262 350
	Windshield Wiper Cover Plate	2, 3, 4	1	1	1	1	1	1	-	1	1	1	1	1	1	1	1	1	1262 350
23-67-139	Windshield Wiper Pivot to Cover (electric).	-	2	2	2	2	2	2	-	2	2	2	2	2	2	2	2	2	882 926

NOTES

★ Indicates use as required.

☐ Indicates parts not listed in any previous parts books.

Series No. (1 indicates B-1 Series) (2 indicates B-2 Series) (3 indicates B-3 Series) (4 indicates B-4 Series)

Where no Series No. is shown part is for B-1, B-2, B-3 and B-4 Series.

Prices and specifications subject to change without notice.

