

PART NAME	CODE	PART NAME	CODE
-----------	------	-----------	------

ALPHABETICAL INDEX.

Absorber, shock	17-23-3 to 17-23-56	Bearing, clutch release	6-19-2 to 6-19-3
Accelerator pedal	14-01-1 to 14-01-23	Bearing, countershaft	21-25-2 to 21-25-4
Accelerator pedal rod	14-07-1	Bearing, countershaft rear	21-27-2 to 21-27-3
Accelerator shaft	14-11-1 to 14-11-28	Bearing, differential	3-11-1 to 3-11-14
Adjuster, hand brake	4-07-1 to 4-07-5	Bearing, drive pinion	3-22-7 to 3-22-62
Anchor, hand brake shoe	4-06-3 to 4-06-12	Bearing, front wheel	22-06-1 to 22-06-24
Anti-squeak, body	23-31-9 to 23-31-143	Bearing, main shaft pilot	21-17-2 to 21-17-9
Anti-squeak and filler, front fender	12-02-6 to 12-02-15	Bearing, main shaft rear	21-19-2 to 21-19-16
Arm, door check	23-10-1 to 23-10-7	Bearing, rear wheel	22-07-1 to 22-07-27
Arm, fuel pump rocker	14-79-4 to 14-79-20	Bearing and gear, main drive	21-09-2 to 21-09-36
Arm, steering linkage knuckle	2-05-4 to 2-05-18	Belt, fan and generator	7-03-1
Arm and idler arm, steering gear	19-27-2 to 19-27-9	Belt rail trim panel	23-90-3 to 23-90-12
Arrestor, front spring torque	17-10-5	Block, cylinder	9-02-5 to 9-02-10
Ash receiver	1-18-2 to 1-18-11	Block, headlamp cable terminal	8-21-1
	23-02-3 to 23-02-31	Board, floor	23-04-3 to 23-04-206
Axle brake tube	5-54-1	Board, running	12-26-2
		Board, toe	23-04-3 to 23-04-206
Ball, carburetor	14-37-2 to 14-37-34	Body, booster cylinder vacuum valve	5-103-3 to 5-103-28
Band, hand brake	4-03-1 to 4-03-7	Body, water pump	7-43-1
Bar, draw	13-71-2 to 13-71-20	Body anti-squeak	23-31-9 to 23-31-143
Battery cable	8-01-4 to 8-01-21	Body bumper	23-08-12 to 23-08-70
Battery hold-down cover	13-34-3 to 13-34-6	Body clip	23-115-6 to 23-115-8
Battery support	13-33-61 to 13-33-65	Body dovetail	23-08-12 to 23-08-70
Bearing, camshaft	9-16-6	Body fastener	23-115-6 to 23-115-8

PART NAME	CODE	PART NAME	CODE
Body gate	23-68-1	Bracket, brake pedal pull-back spring . .	5-36-1
	to	Bracket, brake tube	5-57-2
	23-68-17	Bracket, clutch pedal	6-46-1
Body hold-down bolt	23-05-1		to
	to		6-46-12
	23-05-16	Bracket, engine rear support	9-70-3
Body liner	23-31-9		to
	to		9-70-4
	23-31-143	Bracket, frame body	13-39-1
Body pad	23-31-9		to
	to		13-39-26
	23-31-143	Bracket, frame rear spring	13-54-15
Body plate	23-32-36	Bracket, rear fender	12-21-1
Body rack	23-68-1	Bracket, shock absorber to frame	17-24-3
	to		to
	23-68-17		17-24-19
Body rail	23-51-59	Bracket, steering gear housing	19-07-4
	to		to
	23-51-113		19-07-29
Body reinforcement	23-07-317	Bracket, steering post	19-31-1
	to		to
	23-07-359		19-31-38
Body sill	23-51-59	Bracket, throttle control wire tube . . .	14-26-1
	to		to
	23-51-113		14-26-2
Body striker	23-08-12	Bracket and support, muffler	11-02-13
	to		to
	23-08-70		11-02-20
Body support	23-07-317	Brake flexible hose	5-62-1
	to		to
	23-07-359		5-62-17
Bolt, body hold-down	23-05-1	Brake frame tube	5-53-34
	to	Brake holder	1-43-1
	23-05-16		to
Bolt, brake shoe anchor	5-19-4		1-43-23
	to	Brake holder control switch	1-43-3
	5-19-12	Brake holder solenoid switch	1-43-15
Bolt, drive gear	3-20-1	Brake pedal	5-27-1
	to		to
	3-20-19		5-27-2
Bolt, front spring	17-04-1	Brake pedal bracket	5-31-15
	to	Brake pedal pad	5-28-1
	17-04-9	Brake pedal pull-back spring	5-34-1
Bolt, rear spring center	17-14-1		to
	to		5-34-8
	17-14-10	Brake pedal pull-back spring bracket . .	5-36-1
Booster brake check valve	5-105-1	Brake pedal rod	5-33-1
	to		to
	5-105-4		5-33-5
Booster brake cylinder mounting bracket	5-101-1	Brake pedal shaft	5-29-1
Booster breather air cleaner	5-113-5	Brake shoe adjusting cam	5-22-1
	to		to
	5-113-8		5-22-2
Booster cylinder overhaul kit	5-100-1	Brake shoe adjusting pin	5-21-2
	to	Brake shoe anchor bolt	5-19-4
	5-100-94		to
Booster cylinder to frame tee tube	5-107-4		5-19-12
	to	Brake shoe and lining	5-03-1
	5-107-19		to
Booster cylinder vacuum valve body	5-103-3		5-03-23
	to	Brake shoe guide spring	5-25-1
	5-103-28	Brake support and adjusting pin	5-13-1
Booster to breather air cleaner hose . . .	5-111-6	Brake tube bracket	5-57-2
Boot, master cylinder	5-40-1	Brake tube clip	5-56-2
	to	Brake tube tee	5-58-1
	5-40-2		to
Boot, wheel cylinder	5-69-1		5-58-7
Box, glove	23-06-36	Breather, crankcase oil	10-01-9
Bracket, booster brake cylinder mounting	5-101-1		to
Bracket, brake pedal	5-31-15		10-01-62

PART NAME	CODE	PART NAME	CODE
Bulb, lamp	8-44-1	Carburetor choke	14-39-1
Bumper, body	23-08-12	to	14-39-31
	to	Carburetor float and parts	14-40-1
Bumper, front	23-08-70	to	14-40-7
	13-64-3	Carburetor gasket	14-34-2
	to	to	14-34-38
Bumper, front spring	13-64-136	Carburetor idle parts	14-45-1
Bumper, hood	17-08-3	Carburetor jet	14-35-1
	15-09-4	to	14-35-8
	to	Carburetor nut	14-54-3
Bumper, rear spring	15-09-15	to	14-54-119
	17-19-3	Carburetor piston	14-46-1
	to	Carburetor plug	14-37-2
Bushing and roller, universal joint cross	17-19-11	to	14-37-34
	16-10-1	to	14-41-3
	to	Carburetor pump	14-41-40
Button, hand brake lever	16-10-7	to	14-54-3
	4-14-1	Carburetor screw	14-54-119
	to	to	14-36-1
	4-14-2	Carburetor spring	14-36-29
		to	14-43-3
Cable, battery	8-01-4	Carburetor step-up	14-38-4
	to	Carburetor throttle body valve and parts	to
	8-01-21	to	14-38-34
Cable, hand brake control	4-23-1	Carburetor tube	14-44-1
	to	to	14-44-3
	4-23-40	Carburetor washer	14-54-3
Cable, speedometer	21-84-1	to	14-54-119
	to	Carrier, spare tire	22-40-5
	21-84-5	to	22-40-205
Cable and connections, chassis wiring . .	8-16-2	Carrier and differential	3-03-1
	to	to	3-03-31
Cam, brake shoe adjusting	8-16-8	Case, differential	3-04-6
	5-22-1	Case, transfer	21-100-1
	to	to	21-100-35
	5-22-2	Case, transmission	21-03-1
Camshaft	9-15-1	Catch, hood lock	15-15-1
	to	Chain, timing	9-20-1
	9-15-6	Chain case cover	9-23-1
Camshaft bearing	9-16-6	to	9-23-28
Camshaft gear	9-17-5	Chain case cover plate	9-24-5
	to	to	9-24-7
	9-17-20	Channel, glass	23-09-18
Camshaft gear or sprocket oil tube . . .	9-19-3	to	23-09-52
Camshaft sprocket	9-17-5	Chassis and body wiring	8-15-2
	to	to	8-15-32
	9-17-20	Chassis wiring cable and connections . .	8-16-2
Cap, crankshaft bearing	9-10-5	to	8-16-8
	to	Choke, carburetor	14-39-1
	9-10-22	to	14-39-31
Cap, radiator filler	7-12-1		
Carburetor	14-30-1		
Carburetor air cleaner	14-29-2		
	to		
	14-29-5		
Carburetor air horn	14-47-1		
	to		
	14-47-3		
Carburetor attaching parts	14-31-3		
	to		
	14-31-15		
Carburetor ball	14-37-2		
	to		
	14-37-34		
Carburetor body flange	14-33-1		
	to		
	14-33-5		

POWER WAGON PARTS LIST

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Choke control	14-63-1	Coil and switch, ignition	8-35-4
	to	to	8-35-122
	14-63-24	Connecting rod	9-31-4
Cigar lighter	1-12-1	to	9-31-10
	to	Connecting rod bearing package	9-32-2
	1-12-44	Connection, wheel cylinder inlet	5-66-1
Cleaner, booster breather air	5-113-5	to	5-66-12
	to	Connector, master cylinder outlet	5-41-5
	5-113-8		
Cleaner, carburetor air	14-29-2	Control, choke	14-63-1
	to	to	14-63-24
	14-29-5	Control, door lock and remote	23-18-3
Clinch nut	23-30-1	to	23-18-13
Clip, body	23-115-6	Control, horn	8-33-30
	to	to	8-33-185
	23-115-8	Core, radiator	7-11-3
Clip, brake tube	5-56-2	Countershaft	21-24-2
Clip, front spring	17-05-1	to	21-24-15
	to	Countershaft bearing	21-25-2
	17-05-6	to	21-25-4
Clip, rear spring	17-15-1	Countershaft front bearing retainer	21-26-3
	to	to	21-26-11
	17-15-6	Countershaft gear	21-15-2
Clutch cover and pressure plate	6-14-1	to	21-15-33
	to	Countershaft rear bearing	21-27-2
	6-14-10	to	21-27-3
Clutch disc	6-13-1	Cover, battery hold-down	13-34-3
	to	to	13-34-6
	6-13-8	Cover, chain case	9-23-1
Clutch gear and sleeve	21-14-5	to	9-23-28
	to	Cover, fuel pump	14-76-1
	21-14-20	to	14-76-6
Clutch housing	6-09-1	Cover, gearshift	21-29-2
	to	to	21-29-51
	6-09-10	Cover, oil pump	10-08-2
Clutch housing pan	6-10-2	to	10-08-3
	to	Cover, steering gear housing cover	9-04-1
	6-10-31	to	9-04-13
Clutch operating lever	6-48-1	Cover, valve spring	9-40-1
	to	to	9-40-13
	6-48-22	Cowl outside moulding	23-27-44
Clutch pedal	6-38-1	Cowl trim panel	23-91-6
Clutch pedal bracket	6-46-1	to	23-91-17
	to	Cowl ventilator	23-61-29
	6-46-12	to	23-61-132
Clutch pedal draft pad	6-39-3	Crank, throttle control bell	14-14-1
Clutch pedal pull-back spring	6-27-5	to	14-14-24
	to	Crankcase oil breather	10-01-9
	6-27-6	to	10-01-62
Clutch pedal shaft	6-43-1		
	to		
	6-43-11		
Clutch pressure plate	6-15-1		
Clutch pressure plate eye bolt and nut	6-18-1		
Clutch pressure spring	6-16-1		
Clutch release bearing	6-19-2		
	to		
	6-19-3		
Clutch release bearing pull-back spring	6-20-14		
	to		
	6-20-16		
Clutch release fork	6-22-1		
	to		
	6-22-2		
Clutch release fork flange	6-26-1		
	to		
	6-26-14		
Clutch release lever	6-17-1		
	to		
	6-17-11		

PART NAME	CODE	PART NAME	CODE
Crankcase oil filler	10-01-9	Dimmer switch	8-53-150
	to	Directional signal lamp	1-25-1
	10-01-62		to
Crankcase ventilator	10-02-15		1-25-75
	to	Directional signal lamp control switch. .	1-25-9
	10-02-63	Directional signal lamp switch and	
Crankshaft	9-07-5	wire package	1-25-4
	to	Disc, clutch	6-13-1
	9-07-12		to
Crankshaft bearing cap	9-10-5		6-13-8
	to	Distributor	8-27-1
	9-10-22		to
Crankshaft bearing package	9-09-2		8-27-300
Crankshaft gear	9-08-5	Dome lamp and switch	8-05-6
	to		to
	9-08-7		8-05-20
Crankshaft rear bearing oil seal	9-11-1	Dome lamp switch	8-05-14
	to	Door	23-11-1
	9-11-8		to
Crankshaft sprocket	9-08-5		23-11-2
	to	Door arm rest	23-76-3
	9-08-7		to
Cross, universal joint	16-08-6		23-76-16
	to	Door check arm	23-10-1
	16-08-19		to
Crossmember, fuel tank support	13-15-1		23-10-7
Crossmember, rear	3-18-4	Door glass run	23-42-16
	to		to
	3-18-17		23-42-67
Cup, master cylinder piston	5-45-1	Door hinge	23-15-1
	to		to
	5-45-8		23-15-10
Cup, wheel cylinder piston	5-71-1	Door lock and remote control	23-18-3
	to		to
	5-71-2		23-18-13
Cylinder, master	5-39-1	Door regulator handle	23-14-10
	to		to
	5-39-25		23-14-132
Cylinder, wheel	5-64-1	Door trim panel	23-92-5
	to	Dovetail, body	23-08-12
	5-64-4		to
Cylinder block	9-02-5		23-08-70
	to	Drag link	2-02-1
	9-02-10		to
Cylinder head	9-03-4		2-02-57
	to	Drain cock, radiator	7-13-2
	9-03-13	Draw bar	13-71-2
Cylinder water outlet elbow	9-05-5		to
	to		13-71-20
	9-05-7	Drip moulding	23-59-56
			to
			23-59-57
Differential and carrier	3-03-1	Drive, front axle universal	2-12-5
	to		to
	3-03-31		2-12-69
Differential bearing	3-11-1	Drive gear and pinion	3-19-1
	to	Drive gear bolt	3-20-1
	3-11-14		to
Differential case	3-04-6		3-20-19
Differential gear	3-07-1	Drive pinion bearing	3-22-7
	to		to
	3-07-2		3-22-62
Differential pinion	3-07-1	Drive shaft	3-32-1
	to		to
	3-07-2		3-32-8
Differential pinion shaft	3-08-1	Drive shaft flange	3-36-1
Differential side gear	3-06-5		to
	to		3-36-2
	3-06-6	Drum, hand brake	4-01-1
			to
			4-01-2

POWER WAGON PARTS LIST

ALPHABETICAL INDEX

PART NAME	CODE	PART NUMBER	CODE
Drum, hub and brake	22-03-1 to 22-03-2	Filler and weathercord	23-113-3 to 23-113-12
Drum, wheel brake	22-04-1 to 22-04-28	Filter, fuel	14-67-1 to 14-67-23
Elbow, cylinder water outlet	9-05-5 to 9-05-7	Filter, oil	10-26-6 to 10-26-49
Elbow, fuel tube	14-90-6 to 14-90-20	Flange, carburetor body	14-33-1 to 14-33-5
Elbow, water pump by-pass.	7-48-12 to 7-48-16	Flange, clutch release fork.	6-26-1 to 6-26-14
Engine.	9-01-5 to 9-01-19	Flange, drive shaft	3-36-1 to 3-36-2
Engine dust pan	12-31-2 to 12-31-5	Flange, exhaust pipe	11-06-3 to 11-06-8
Engine front support insulator	9-67-4	Flange, front axle steering knuckle . . .	2-13-3 to 2-13-37
Engine front support plate	9-65-6	Flange, propeller shaft	16-20-1 to 16-20-20
Engine rear support	9-69-28 to 9-69-47	Float and parts, carburetor	14-40-1 to 14-40-7
Engine rear support bracket	9-70-3 to 9-70-4	Floor board	23-04-3 to 23-04-206
Engine rear support insulator.	9-71-5 to 9-71-12	Floor mat	23-20-8 to 23-20-10
Engine support - front	9-64-5 to 9-64-35	Fluid, hydraulic brake	5-01-2
Exhaust pipe	11-05-1	Flywheel	9-45-1 to 9-45-7
Exhaust pipe flange	11-06-3 to 11-06-8	Fog light	1-34-1 to 1-34-43
Expander, piston.	9-38-1	Fog light switch	1-34-29
Expander, wheel cylinder piston cup. . .	5-72-1	Fork, clutch release	6-22-1 to 6-22-2
Extension, rear	13-42-5	Fork, gearshift	21-39-3 to 21-39-23
Eye bolt and nut, clutch pressure plate .	6-18-1	Fork and rail, transfer case shift. . . .	21-109-1 to 21-109-17
Fan	7-02-1 to 7-02-16	Frame	13-01-1
Fan and generator belt	7-03-1	Frame body bracket.	13-39-1 to 13-39-26
Fan pulley	7-06-1 to 7-06-14	Frame clinch nut	13-22-1
Fan pulley hub	7-05-1	Frame front spring hanger	13-53-3 to 13-53-17
Fan shroud	7-08-2	Frame rear spring bracket.	13-54-15
Fastener, body.	23-115-6 to 23-115-8	Front axle housing.	2-11-1 to 2-11-102
Fender, front	12-01-5	Front axle steering knuckle flange. . . .	2-13-3 to 2-13-37
Fender, rear.	12-18-5 to 12-18-58	Front axle universal drive	2-12-5 to 2-12-69
Filler, crankshaft oil	10-01-9 to 10-01-62		
Filler and anti-squeak, front fender . . .	12-02-6 to 12-02-15		

PART NAME	CODE	PART NAME	CODE
Front bumper	13-64-3 to 13-64-136	Fuel tank gauge	14-72-1 to 14-72-47
Front bumper guard	13-68-32 to 13-68-36	Fuel tank locking cap key	1-39-5
Front fender	12-01-5	Fuel tank support	14-88-21 to 14-88-22
Front fender anti-squeak and filler.	12-02-6 to 12-02-15	Fuel tank support crossmember	13-15-1
Front fender shield	12-04-4 to 12-04-33	Fuel tank tubing	14-89-15 to 14-89-57
Front fender support	12-05-2 to 12-05-37	Fuel tube elbow	14-90-6 to 14-90-20
Front main spring leaf	17-02-5	Fuel tube union	14-90-6 to 14-90-20
Front seat back hinge	23-46-3 to 23-46-6	Garnish moulding	23-22-86 to 23-22-156
Front seat trim	23-108-4 to 23-108-16	Gasket, carburetor	14-34-2 to 14-34-38
Front section	23-12-1	Gasket, fuel pump mounting	14-74-1
Front spring	17-01-3 to 17-01-17	Gasket, manifold	9-50-1 to 9-50-3
Front spring bolt	17-04-1 to 17-04-9	Gate, body	23-68-1 to 23-68-17
Front spring bumper.	17-08-3	Gauge, fuel tank	14-72-1 to 14-72-47
Front spring clip	17-05-1 to 17-05-6	Gear, camshaft	9-17-5 to 9-17-20
Front spring shackle	17-06-3 to 17-06-13	Gear, countershaft	21-15-2 to 21-15-33
Front spring torque arrestor	17-10-5	Gear, crankshaft	9-08-5 to 9-08-7
Front wheel bearing	22-06-1 to 22-06-24	Gear, differential	3-07-1 to 3-07-2
Fuel filter	14-67-1 to 14-67-23	Gear, differential side	3-06-5 to 3-06-6
Fuel pump	14-73-2 to 14-73-7	Gear, mainshaft	21-10-6 to 21-10-78
Fuel pump cover	14-76-1 to 14-76-6	Gear, oil pump drive	10-10-1 to 10-10-3
Fuel pump diaphragm parts	14-77-5 to 14-77-20	Gear, reverse idler	21-11-1 to 21-11-2
Fuel pump heat shield	14-81-1 to 14-81-2	Gear, steering	19-01-5 to 19-01-8
Fuel pump mounting gasket	14-74-1	Gear, transfer case	21-111-2
Fuel pump rocker arm	14-79-4 to 14-79-20	Gear and bearing, main drive	21-09-2 to 21-09-36
Fuel pump strainer	14-80-1 to 14-80-7	Gear and pinion, drive	3-19-1
Fuel pump to carburetor tube	14-85-1	Gear and pinion, speedometer	21-85-27 to 21-85-68
Fuel pump valve	14-78-4 to 14-78-5		
Fuel tank	14-86-1 to 14-86-55		

POWER WAGON PARTS LIST

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Gear and shaft, transfer case drive	21-102-1	Hand brake lever pawl rod	4-21-1
	to		to
	21-102-26		4-21-22
Gear and shaft, transfer case idler	21-104-1	Hand brake lever pull rod	4-20-2
	to		to
	21-104-33		4-20-18
Gear and sleeve, clutch	21-14-5	Hand brake lever sector	4-12-1
	to		to
	21-14-20		4-12-2
Gearshift cover	21-29-2	Hand brake shoe	4-03-1
	to		to
	21-29-51		4-03-7
Gearshift fork	21-39-3	Hand brake shoe anchor	4-06-3
	to		to
	21-39-23		4-06-12
Gearshift lever	21-30-2	Hand brake support	4-29-1
	to		to
	21-30-153		4-29-2
Gearshift rail	21-34-8	Handle, door regulator	23-14-10
	to		to
	21-34-44		23-14-132
Gearshift reverse latch plunger	21-41-2	Handle, hood	15-18-3
	to		to
	21-41-5		15-18-4
Generator	8-28-3	Hanger, frame front spring	13-53-3
	to		to
	8-28-297		13-53-17
Generator component parts	8-29-1	Hanger, running board	13-48-1
	to	Head, cylinder	9-03-4
	8-29-327		to
Glass channel	23-09-18		9-03-13
	to	Header trim panel	23-93-6
	23-09-52	Headlamp	8-34-1
Glove box	23-06-36		to
Governor	14-68-12		8-34-302
	to	Headlamp beam indicator	8-39-3
	14-68-20		to
Governor, variable speed	14-71-4		8-39-18
	to	Headlamp cable terminal block	8-21-1
	14-71-30	Headlamp switch	8-53-270
Guard, front bumper	13-68-32	Heater	1-48-1
	to		to
	13-68-36		1-48-958
Guard, radiator	7-51-1	Heater switch	1-48-770
	to	Hinge, door	23-15-1
	7-51-25		to
Gusset, transfer case crossmember	13-46-18		23-15-10
		Hinge, front seat back	23-46-3
			to
			23-46-6
Hand brake adjuster	4-07-1	Hinge, hood	15-19-2
	to		to
	4-07-5		15-19-29
Hand brake band	4-03-1	Hinge pillar trim	23-99-5
	to	Holder, brake	1-43-1
	4-03-7		to
Hand brake cam lever	4-26-1		1-43-23
	to	Hood	15-01-6
	4-26-12	Hood bumper	15-09-4
Hand brake control cable	4-23-1		to
	to		15-09-15
	4-23-40	Hood handle	15-18-3
Hand brake drum	4-01-1		to
	to		15-18-4
	4-01-2	Hood hinge	15-19-2
Hand brake lever	4-08-1		to
Hand brake lever button	4-14-1		15-19-29
	to	Hood hinge rod	15-20-1
	4-14-2	Hood lacing	15-27-1
Hand brake lever pawl	4-13-1		to
			15-27-2

PART NAME	CODE	PART NAME	CODE
Hood lock	15-11-12 to 15-11-18	Indicator, oil level	10-03-4 to 10-03-7
Hood lock catch	15-15-1	Instrument lamp	8-41-36 to 8-41-40
Hood medallion	15-06-3	Instrument panel instruments	8-37-1 to 8-37-440
Hood name plate	15-06-3	Instrument panel lamp switch	8-53-210
Hood prop	15-21-1 to 15-21-18	Instruments, instrument panel	8-37-1 to 8-37-440
Hook, pintle	13-62-2 to 13-62-10	Insulator, engine front support	9-67-4
Hook, tow	13-61-2 to 13-61-3	Insulator, engine rear support	9-71-5 to 9-71-12
Horn	8-32-2 to 8-32-213	Intake and exhaust manifold	9-48-6 to 9-48-45
Horn, carburetor air	14-47-1 to 14-47-3	Jacket, steering gear column	19-14-1 to 19-14-35
Horn control	8-33-30 to 8-33-185	Jet, carburetor	14-35-1 to 14-35-8
Hose, booster to breather air cleaner . .	5-111-6	Joint, throttle control ball	14-13-1
Hose, brake flexible	5-62-1 to 5-62-17	Key, fuel tank locking cap	1-39-5
Hose, radiator	7-14-1 to 7-14-26	Kit, booster cylinder overhaul	5-100-1 to 5-100-94
Housing, clutch	6-09-1 to 6-09-10	Knob and wire, throttle control	14-24-1 to 14-24-7
Housing, front axle	2-11-1 to 2-11-102	Knuckle, steering	2-03-3 to 2-03-4
Housing, rear axle	3-02-1 to 3-02-46	Lacing, hood	15-27-1 to 15-27-2
Housing, steering gear	19-02-4 to 19-02-17	Lamp, directional signal	1-25-1 to 1-25-75
Hub, fan pulley	7-05-1	Lamp, instrument	8-41-36 to 8-41-40
Hub, wheel	22-05-1 to 22-05-24	Lamp, marker and clearance	8-48-4 to 8-48-35
Hub and brake drum	22-03-1 to 22-03-2	Lamp, stop	8-58-60 to 8-58-63
Hydraulic brake fluid	5-01-2	Lamp, tail	8-55-7 to 8-55-293
Idle parts, carburetor	14-45-1	Lamp and switch, dome	8-05-6 to 8-05-20
Ignition coil and switch	8-35-4 to 8-35-122	Lamp bulb	8-44-1
Ignition spark plug	8-36-1 to 8-36-115	Leaf, front main spring	17-02-5
Ignition wiring	8-36-1 to 8-36-115	Leaf, rear spring	17-12-4
Impeller, water pump	7-45-3 to 7-45-31		
Indicator, headlamp beam	8-39-3 to 8-39-18		

POWER WAGON PARTS LIST

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Lever, clutch operating	6-48-1 to 6-48-22	Manifold gasket	9-50-1 to 9-50-3
Lever, clutch release	6-17-1 to 6-17-11	Manifold heat control valve shaft and plate	9-59-4 to 9-59-8
Lever, gearshift	21-30-2 to 21-30-153	Marker and clearance lamp	8-48-4 to 8-48-35
Lever, hand brake	4-08-1	Master cylinder	5-39-1 to 5-39-25
Lever, hand brake cam	4-26-1 to 4-26-12	Master cylinder boot	5-40-1 to 5-40-2
Lever, throttle	14-08-25 to 14-08-31	Master cylinder brake tube	5-52-10 to 5-52-11
Lever, throttle control	14-17-1 to 14-17-9	Master cylinder outlet connector	5-41-5
Lever, transfer case control	21-101-1 to 21-101-32	Master cylinder piston	5-44-3 to 5-44-10
License mounting parts	8-47-8 to 8-47-75	Master cylinder piston cup	5-45-1 to 5-45-8
Light, fog	1-34-1 to 1-34-43	Master cylinder piston push rod	5-47-2 to 5-47-4
Lighter, cigar	1-12-1 to 1-12-44	Master cylinder piston spring	5-46-1
Liner, body	23-31-9 to 23-31-143	Master cylinder valve	5-43-1 to 5-43-3
Lining and shoe, brake	5-03-1 to 5-03-23	Mat, floor	23-20-8 to 23-20-10
Link, drag	2-02-1 to 2-02-57	Material, trimming	23-114-15
Lock, hood	15-11-12 to 15-11-18	Medallion, hood	15-06-3
Lock, spare tire carrier	22-48-18 to 22-48-37	Metal panel	23-34-12 to 23-34-364
Lock cylinder reinforcement	23-17-28	Mirror, rear view	1-76-6 to 23-21-8
Main drive gear and bearing	21-09-2 to 21-09-36	Motor, starting	23-21-34 to 8-52-2
Main shaft	21-16-3	Moulding, cowl outside	8-52-457
Main shaft gear	21-10-6 to 21-10-78	Moulding, drip	23-27-44 to 23-59-56
Main shaft pilot bearing	21-17-2 to 21-17-9	Moulding, garnish	23-59-57 to 23-22-86
Main shaft rear bearing	21-19-2 to 21-19-16	Muffler	11-01-1
Main shaft rear bearing oil seal	21-22-2	Muffler support and bracket	11-02-13 to 11-02-20
Main shaft rear bearing retainer	21-23-2 to 21-23-17	Nut, carburetor	14-54-3 to 14-54-119
Manifold, intake and exhaust	9-48-6 to 9-48-45	Nut, clinch	23-30-1
		Nut, frame clinch	13-22-1
		Oil filter	10-26-6 to 10-26-49

PART NAME	CODE	PART NAME	CODE
Oil filter tube	10-27-1 to 10-27-12	Parts, carburetor attaching.	14-31-3 to 14-31-15
Oil gauge tube	10-05-4 to 10-05-24	Parts, fuel pump diaphragm	14-77-5 to 14-77-20
Oil level indicator	10-03-4 to 10-03-7	Parts, generator component	8-29-1 to 8-29-327
Oil pan	10-24-1 to 10-24-39	Parts, license mounting.	8-47-8 to 8-47-75
Oil pressure relief valve	10-22-11 to 10-22-41	Parts, shock absorber component	17-26-6 to 17-26-40
Oil pump	10-07-3 to 10-07-11	Parts, winch.	21-97-3 to 21-97-140
Oil pump cover	10-08-2 to 10-08-3	Pawl, hand brake lever.	4-13-1
Oil pump drive gear	10-10-1 to 10-10-3	Pedal, accelerator	14-01-1 to 14-01-23
Oil pump outlet pipe	10-16-4 to 10-16-9	Pedal, brake.	5-27-1 to 5-27-2
Oil pump rotor pin	10-14-19	Pedal, clutch	6-38-1
Oil pump suction pipe	10-18-4	Pin, brake shoe adjusting.	5-21-2
Oil strainer.	10-23-7	Pin, brake support and adjusting	5-13-1
Package, connecting rod bearing	9-32-2	Pin, oil pump rotor.	10-14-19
Package, crankshaft bearing	9-09-2	Pin, piston.	9-36-5 to 9-36-7
Package, transmission	21-01-3	Pinion, differential	3-07-1 to 3-07-2
Package, universal joint.	16-03-1	Pinion and gear, drive	3-19-1
Package, wheel cylinder service	5-63-1	Pinion and gear, speedometer	21-85-27 to 21-85-68
Pad, body.	23-31-9 to 23-31-143	Pintle hook.	13-62-2 to 13-62-10
Pad, brake pedal	5-28-1	Pipe, exhaust	11-05-1
Pad, clutch pedal draft	6-39-3	Pipe, oil pump outlet	10-16-4 to 10-16-9
Pan, clutch housing	6-10-2 to 6-10-31	Pipe, oil pump suction	10-18-4
Pan, engine dust.	12-31-2 to 12-31-5	Pipe, tail	11-09-3
Pan, oil	10-24-1 to 10-24-39	Piston	9-34-5 to 9-34-6
Panel, belt rail trim	23-90-3 to 23-90-12	Piston, carburetor.	14-46-1
Panel, cowl trim	23-91-6 to 23-91-17	Piston, master cylinder	5-44-3 to 5-44-10
Panel, door trim	23-92-5	Piston, wheel cylinder	5-70-1
Panel, header trim	23-93-6	Piston expander	9-38-1
Panel, metal	23-34-12 to 23-34-364	Piston pin	9-36-5 to 9-36-7
Panel, rear quarter trim	23-101-3	Piston ring.	9-35-1
Panel, roof headlining trim.	23-86-22 to 23-86-25	Plate, body	23-32-36
Parking lamp and turn signal.	8-50-82 to 8-50-365	Plate, chain case cover.	9-24-5 to 9-24-7
		Plate, clutch cover and pressure	6-14-1 to 6-14-10
		Plate, clutch pressure	6-15-1
		Plate, engine front support.	9-65-6

PART NAME	CODE	PART NAME	CODE
Plate, hood name	15-06-3	Radiator overflow tank	7-52-2
Plate, water pump body cover	7-44-2	to	7-52-9
	to	Radiator side shell and support	7-28-4
	7-44-6	Radiator tie rod	7-37-2
Plate and shaft, manifold heat control		Radiator tube	7-14-1
valve	9-59-4	to	7-14-26
	to	Radiator upper shell	7-18-2
	9-59-8	to	7-18-45
Plug, carburetor	14-37-2	Rail, body	23-51-59
	to	to	23-51-113
	14-37-34	Rail, gearshift	21-34-8
Plug, ignition spark	8-36-1	to	21-34-44
	to	Rail and fork, transfer case shift	21-109-1
	8-36-115	to	21-109-17
Plunger, gearshift reverse latch	21-41-2	Rear axle housing	3-02-1
	to	to	3-02-46
	21-41-5	Rear crossmember	3-18-4
Power take-off	21-08-1	to	3-18-17
	to	Rear extension	13-42-5
	21-08-142	Rear Fender	12-18-5
Prop, hood	15-21-1	to	12-18-58
	to	Rear fender bracket	12-21-1
	15-21-18	Rear Fender welt	12-20-4
Propeller shaft flange	16-20-1	Rear quarter trim panel	23-101-3
	to	Rear spring	17-11-3
	16-20-20	to	17-11-26
Propeller shaft, less universal joint	16-02-2	Rear spring bumper	17-19-3
	to	to	17-19-11
	16-02-4	Rear Spring center bolt	17-14-1
Propeller shaft sliding yoke	16-14-1	to	17-14-10
	to	Rear Spring clip	17-15-1
	16-14-9	to	17-15-6
Propeller shaft spline	16-14-1	Rear Spring leaf	17-12-4
	to	Rear Spring shackle	17-16-3
	16-14-9	to	17-16-15
Propeller shaft yoke	16-20-1	Rear view mirror	1-76-6
	to	to	23-21-8
	16-20-20	to	23-21-34
Pulley, fan	7-06-1	Rear Wheel bearing	22-07-1
	to	to	22-07-27
	7-06-14	Receiver, ash	1-18-2
Pump, carburetor	14-41-3	to	1-18-11
	to	to	23-02-3
	14-41-40	to	23-02-31
Pump, fuel	14-73-2	Reflector	8-51-1
	to	to	8-51-2
	14-73-7	Regulator, window	23-39-5
Pump, oil	10-07-3	Reinforcement, body	23-07-317
	to	to	23-07-359
	10-07-11	Reinforcement, lock cylinder	23-17-28
Pump, water	7-42-1		
	to		
	7-42-4		
Rack, body	23-68-1		
	to		
	23-68-17		
Radiator core	7-11-3		
Radiator core support	7-29-1		
	to		
	7-29-62		
Radiator drain cock	7-13-2		
Radiator filler cap	7-12-1		
Radiator guard	7-51-1		
	to		
	7-51-25		
Radiator hose	7-14-1		
	to		
	7-14-26		

PART NAME	CODE	PART NAME	CODE
Rest, door arm	23-76-3	Shackle, rear spring	17-16-3
	to		to
	23-76-16		17-16-15
Retainer, main shaft rear bearing	21-23-2	Shaft, accelerator	14-11-1
	to		to
	21-23-17		14-11-28
Retainer, countershaft front bearing	21-26-3	Shaft, brake pedal	5-29-1
	to	Shaft, clutch pedal	6-43-1
	21-26-11		to
Reverse idler gear	21-11-1		6-43-11
	to	Shaft, differential pinion	3-08-1
	21-11-2	Shaft, drive	3-32-1
Reverse idler shaft	21-12-1		to
Ring, piston	9-35-1		3-32-8
Ring, wheel disc rim base side	22-11-9	Shaft, main	21-16-3
Rod, accelerator pedal	14-07-1	Shaft, propeller - less universal joint	16-02-2
Rod, brake pedal	5-33-1		to
	to		16-02-4
	5-33-5	Shaft, reverse idler	21-12-1
Rod, connecting	9-31-4	Shaft, steering gear	19-19-4
	to		to
	9-31-10		19-19-40
Rod, hand brake lever pawl	4-21-1	Shaft, transfer case driven gear	21-103-6
	to		to
	4-21-22		21-103-24
Rod, hand brake lever pull	4-20-2	Shaft, water pump	7-45-3
	to		to
	4-20-18		7-45-31
Rod, hood hinge	15-20-1	Shaft and gear, transfer case drive	21-102-1
Rod, master cylinder piston push	5-47-2		to
	to		21-102-26
	5-47-4	Shaft and gear, transfer case idler	21-104-1
Rod, radiator tie	7-37-2		to
Rod, steering knuckle tie	2-07-1		21-104-33
	to	Shaft and plate, manifold heat control	
	2-07-51	valve	9-59-4
Roller and bushing, universal joint cross	16-10-1		to
	to		9-59-8
	16-10-7	Shell, radiator upper	7-18-2
Roof headlining trim panel	23-86-22		to
	to		7-18-45
	23-86-25	Shell and support, radiator side	7-28-4
Run, door glass	23-42-16	Shield, front fender	12-04-4
	to		to
	23-42-67		12-04-33
Running board	12-26-2	Shield, fuel pump heat	14-81-1
Running board hanger	13-48-1		to
			14-81-2
		Shock absorber	17-23-3
			to
Screw, carburetor	14-54-3		17-23-56
	to	Shock absorber component parts	17-26-6
	14-54-119		to
Screw, throttle control spring	14-23-14		17-26-40
	to	Shock absorber to frame bracket	17-24-3
	14-23-15		to
Screw, wheel cylinder bleeder	5-67-1		17-24-19
Seal, crankshaft rear bearing oil	9-11-1	Shoe, hand brake	4-03-1
	to		to
	9-11-8		4-03-7
Seal, main shaft rear bearing oil	21-22-2	Shoe and lining, brake	5-03-1
Seal, water pump	7-46-1		to
	to		5-03-23
	7-46-13	Shroud, fan	7-08-2
Section, front	23-12-1	Signal, parking lamp and turn	8-50-82
Sector, hand brake lever	4-12-1		to
	to		8-50-365
	4-12-2	Sill, body	23-51-59
Shackle, front spring	17-06-3		to
	to		23-51-113
	17-06-13		

POWER WAGON PARTS LIST

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Sleeve and gear, clutch	21-14-5	Steering gear housing cover	19-04-1
	to		to
	21-14-20		19-04-13
Spare tire carrier	22-40-05	Steering gear shaft	19-19-4
	to		to
	22-40-205		19-19-40
Spare tire carrier lock	22-48-18	Steering gear tube and worm	19-15-3
	to		to
	22-48-37		19-15-63
Speedometer cable	21-84-1	Steering knuckle	2-03-3
	to		to
	21-84-5		2-03-4
Speedometer gear and pinion	21-85-27	Steering knuckle tie rod	2-07-1
	to		to
	21-85-68		2-07-51
Spline, propeller shaft	16-14-1	Steering linkage knuckle arm	2-05-4
	to		to
	16-14-9		2-05-18
Spotlight	1-108-6	Steering post bracket	19-31-1
	to		to
	1-108-48		19-31-38
Spring, brake pedal pull-back	5-34-1	Steering wheel	19-30-4
	to		to
	5-34-8		19-30-18
Spring, brake shoe guide	5-25-1	Step-Up, carburetor	14-43-3
Spring, carburetor	14-36-1	Stop lamp	8-58-60
	to		to
	14-36-29		8-58-63
Spring, clutch pedal pull-back	6-27-5	Strainer, oil	10-23-7
	to	Strainer, fuel pump	14-80-1
	6-27-6		to
Spring, clutch pressure	6-16-1		14-80-7
Spring, clutch release bearing pull-back	6-20-14	Striker, body	23-08-12
	to		to
	6-20-16		23-08-70
Spring, front	17-01-3	Support, battery	13-33-61
	to		to
	17-01-17		13-33-65
Spring, master cylinder piston	5-46-1	Support, body	23-07-317
Spring, rear	17-11-3		to
	to		23-07-359
	17-11-26	Support, engine front	9-64-5
Spring, throttle return	14-06-1		to
Sprocket, camshaft	9-17-5		9-64-35
	to	Support, engine rear	9-69-28
	9-17-20		to
Sprocket, crankshaft	9-08-5		9-69-47
	to	Support, front fender	12-05-2
	9-08-7		to
Starting motor	8-52-2		12-05-37
	to	Support, fuel tank	14-88-21
	8-52-457		to
Starting motor switch	8-52-290		14-88-22
Steering gear	19-01-5	Support, hand brake	4-29-1
	to		to
	19-01-8		4-29-2
Steering gear arm and idler arm	19-27-2	Support, radiator core	7-29-1
	to		to
	19-27-9		7-29-62
Steering gear column jacket	19-14-1	Support, tail pipe	11-10-3
	to	Support and bracket, muffler	11-02-13
	19-14-35		to
Steering gear grease retaining tube	19-13-2		11-02-20
Steering gear housing	19-02-4	Support and shell, radiator side	7-28-4
	to	Switch, brake holder control	1-43-3
	19-02-17	Switch, brake holder solenoid	1-43-15
Steering gear housing bracket	19-07-4	Switch, dimmer	8-53-150
	to	Switch, dome lamp	8-05-14
	19-07-29	Switch, fog light	1-34-29
		Switch, headlamp	8-53-270

PART NAME	CODE	PART NAME	CODE
Switch, heater	1-48-770	Transfer case	21-100-1
Switch, instrument panel lamp	8-53-210	to	21-100-35
Switch, starting motor	8-52-290	Transfer case control lever	21-101-1
Switch, turn signal lamp	8-50-82	to	21-101-32
Switch, windshield wiper (electric)	23-67-160	Transfer case crossmember gusset	13-46-18
Switch and coil, ignition	8-35-4	Transfer case drive gear and shaft	21-102-1
	to	to	21-102-26
Switch and lamp, dome	8-35-122	Transfer case driven gear shaft	21-103-6
	8-05-6	to	21-103-24
	to	Transfer case gear	21-111-2
Switch and wire package, directional	8-05-20	Transfer case idler gear and shaft	21-104-1
signal lamp	1-25-4	to	21-104-33
Switches	8-53-150	Transfer case shift fork and rail	21-109-1
	to	to	21-109-17
	8-53-296	Transmission	21-02-1
		Transmission case	21-03-1
Tail lamp	8-55-7	Transmission package	21-01-3
to	to	Trim, front seat	23-108-4
8-55-293	11-09-3	to	23-108-16
Tail pipe	11-09-3	Trim, hinge pillar	23-99-5
Tail pipe support	11-10-3	Trimming material	23-114-15
Take-off, power	21-08-1	Tube, axle brake	5-54-1
	to	Tube, booster cylinder to frame tee	5-107-4
	21-08-142	to	5-107-19
Tank, fuel	14-86-1	Tube, brake frame	5-53-34
	to	Tube, camshaft gear or sprocket oil	9-19-3
	14-86-55	Tube, carburator	14-44-1
Tank, radiator overflow	7-52-2	to	14-44-3
	to	Tube, fuel pump to carburetor	14-85-1
	7-52-9	Tube, master cylinder brake	5-52-10
Tappet, valve	9-41-4	to	5-52-11
	to	Tube, oil filter	10-27-1
	9-41-5	to	10-27-12
Tee, brake tube	5-58-1	Tube, oil gauge	10-05-4
	to	to	10-05-24
	5-58-7	Tube, radiator	7-14-1
Thermostat	7-41-4	to	7-14-26
	to	Tube, steering gear grease retaining	19-13-2
	7-41-16	Tube and worm, steering gear	19-15-3
Throttle control ball joint	14-13-1	to	19-15-63
Throttle control bell crank	14-14-1	Tubing, fuel tank	14-89-15
	to	to	14-89-57
	14-14-24	Turn signal lamp switch	8-50-82
Throttle control knob and wire	14-24-1		
	to		
	14-24-7	Union, fuel tube	14-90-6
Throttle control lever	14-17-1	to	14-90-20
	to	Universal joint cross	16-08-6
	14-17-9	to	16-08-19
Throttle control spring screw	14-23-14	Universal joint cross roller and bushing	16-10-1
	to	to	16-10-7
	14-23-15		
Throttle control wire tube bracket	14-26-1		
	to		
	14-26-2		
Throttle lever	14-08-25		
	to		
	14-08-31		
Throttle return spring	14-06-1		
Timing chain	9-20-1		
Toe board	23-04-3		
	to		
	23-04-206		
Tow hook	13-61-2		
	to		
	13-61-3		

POWER WAGON PARTS LIST

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Universal joint package	16-03-1	Weatherstrip	23-63-33 to 23-63-133
Valve	9-39-1 to 9-39-17	Welt, rear fender	12-20-4
Valve, booster brake check.	5-105-1 to 5-105-4	Wheel	22-01-5
Valve, fuel pump	14-78-4 to 14-78-5	Wheel, steering	19-30-4 to 19-30-18
Valve, master cylinder	5-43-1 to 5-43-3	Wheel brake drum	22-04-1 to 22-04-28
Valve, oil pressure relief	10-22-11 to 10-22-41	Wheel cylinder	5-64-1 to 5-64-4
Valve and parts, carburator throttle body	14-38-4 to 14-38-34	Wheel cylinder bleeder screw	5-67-1
Valve spring cover.	9-40-1 to 9-40-13	Wheel cylinder boot	5-69-1
Valve tappet	9-41-4 to 9-41-5	Wheel cylinder inlet connection	5-66-1 to 5-66-12
Variable speed governor.	14-71-4 to 14-71-30	Wheel cylinder piston	5-70-1
Ventilator, cowl	23-61-29 to 23-61-132	Wheel cylinder piston cup.	5-71-1 to 5-71-2
Ventilator, crankcase	10-02-15 to 10-02-63	Wheel cylinder piston cup expander	5-72-1
Visor, windshield	23-103-3 to 23-103-18	Wheel cylinder service package	5-63-1
Washer, carburetor	14-54-3 to 14-54-119	Wheel disc rim base side ring.	22-11-9
Washer, windshield	1-82-2 to 1-82-38	Wheel hub	22-05-1 to 22-05-24
Water pump	7-42-1 to 7-42-4	Winch parts	21-97-3 to 21-97-140
Water pump body	7-43-1	Window	23-64-6 to 23-64-314
Water pump body cover plate.	7-44-2 to 7-44-6	Window regulator	23-39-5
Water pump by-pass elbow	7-48-12 to 7-48-16	Windshield	23-66-3 to 23-66-235
Water pump impeller	7-45-3 to 7-45-31	Windshield visor	23-103-3 to 23-103-18
Water pump seal.	7-46-1 to 7-46-13	Windshield washer.	1-82-2 to 1-82-38
Water pump shaft	7-45-3 to 7-45-31	Windshield wiper	23-67-3 to 23-67-194
Weathercord and filler	23-113-3 to 23-113-12	Windshield wiper switch (electric).	23-67-160
		Wiper, windshield	23-67-3 to 23-67-194
		Wiring, chassis and body	8-15-2 to 8-15-32
		Wiring, ignition	8-36-1 to 8-36-115
		Worm and tube, steering gear	19-15-3 to 19-15-63
		Yoke, propeller shaft.	16-20-1 to 16-20-20
		Yoke, propeller shaft sliding.	16-14-1 to 16-14-9