


GROUP 4 - HAND BRAKE

4-1

MODELS
1/2 and 1 Ton

HAND BRAKE

Plate 11

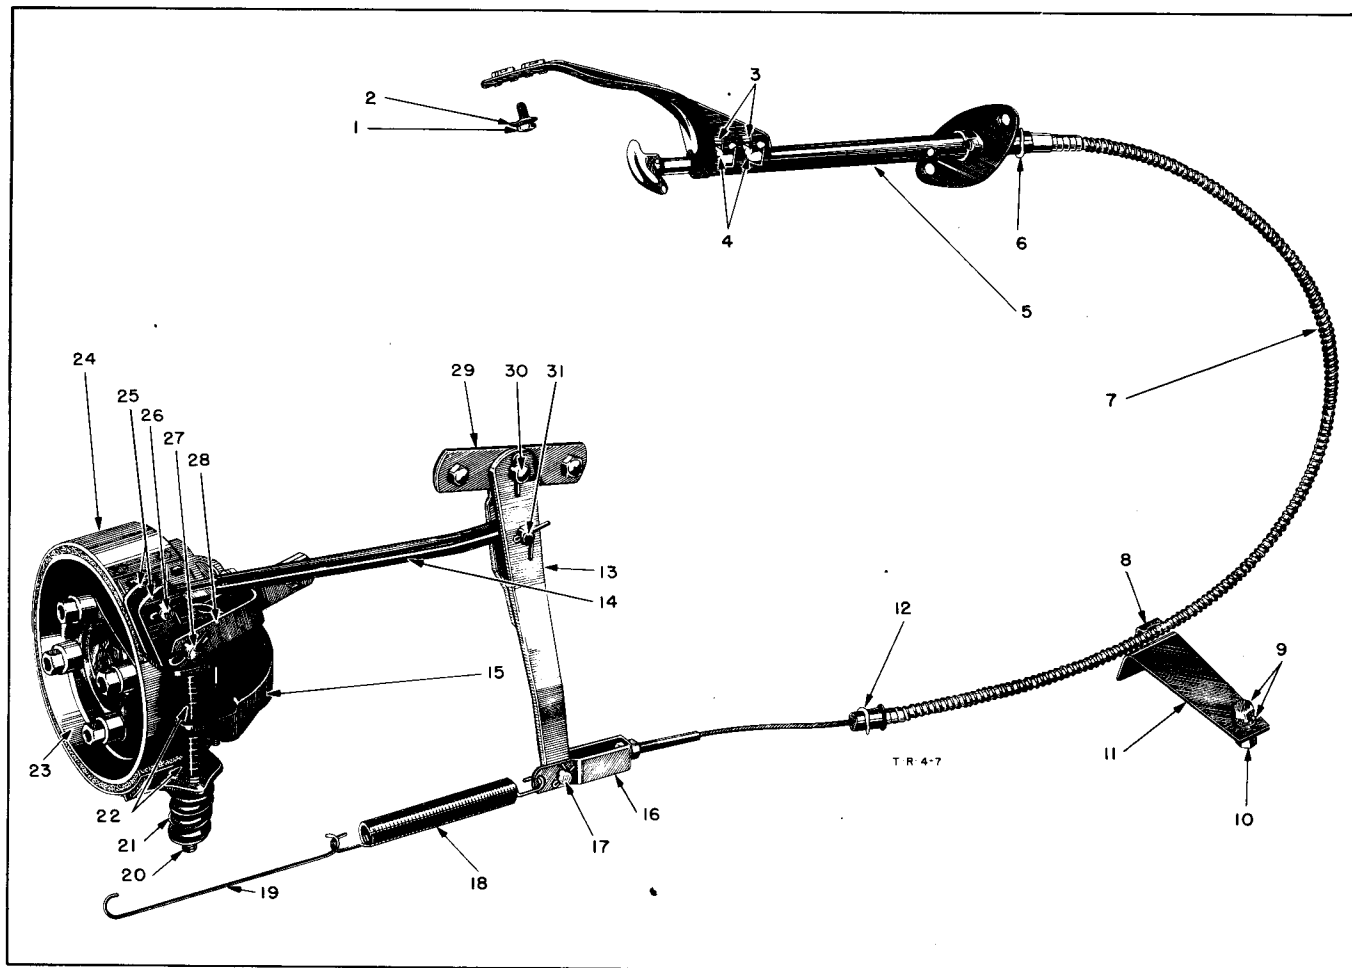

Ref. No.	Part Name	Group	Ref. No.	Part Name	Group
1	Pull rod screw.....	4-D	16	Hand brake cable clevis.....	4-G
2	Pull rod screw washer.....	4-D	17	Hand brake cable clevis pin.....	4-G
3	Pull rod pawl spring.....	4-D	18	Pull back spring.....	4-G
4	Pull rod pawl.....	4-D	19	Pull back spring extension.....	4-G
5	Pull rod assy.....	4-D	20	Brake adjust bolt.....	4-C
6	Cable retaining clip.....	4-G	21	Brake operating spring.....	4-C
7	Hand brake cable.....	4-G	22	Brake adjust spring.....	4-C
8	Cable bracket clip.....	4-G	23	Hand brake drum.....	4-A
9	Cable bracket screw & washer.....	4-G	24	Hand brake band assy.....	4-B
10	Cable bracket screw nut.....	4-G	25	Hand brake cam lever.....	4-H
11	Cable bracket.....	4-G	26	Brake clevis pin - rear.....	4-F
12	Cable retaining clip.....	4-G	27	Hand brake spacer link pin.....	4-H
13	Idler lever.....	4-E	28	Hand brake spacer link.....	4-H
14	Hand brake rod.....	4-F	29	Idler lever support.....	4-E
15	Hand brake support.....	21-A	30	Idler lever support pin.....	4-E
			31	Brake rod clevis pin - front.....	4-F

GROUP 4 - HAND BRAKE

PART NAME	PART NO.	MODEL CODES											
		DG AND FO					DH AND FP						
		1	2	3	4	5	6	1	2	4	5	6	7
GROUP 4-B HAND BRAKE BAND (Cont'd)													
Hand Brake Band (Cont'd)													
Lining - with trans. case drain plug at right side - exc. 5-speed trans. - - -	1272926	1	1	1	1
Lining - with 5-speed trans. - note 3 -	1194329	1	1
Lining - with 5-speed trans. - note 4 -	1272926	1	1	1	1	1	1	1
Rivet - split - - - - -	113194	12	12
Rivet - tubular - - - - -	104944	4	4
Rivet - - - - -	114518	..	*	*	*	*	*	..	*	*	*	*	*
Rivet - bracket to band - - - - -	104152	8	6	8	8	8	8	8	6	8	8	8	8
Hand Brake Band Support - See Group 21													
Transmission mainshaft rear bearing retainer - - - - -													
Hand Brake Band Ancnor													
Anchor - - - - -	655460	1	1
Rivet - anchor to band - - - - -	104152	4	6	6	6	6	6	4	6	6	6	6	6
Spring - - - - -	661312	1	1
Spring - anchor to clip - - - - -	517384	..	1	1	1	1	1	..	1	1	1	1	1
Screw - - - - -	665454	1	1
Screw - - - - -	596694	..	1	1	1	1	1	..	1	1	1	1	1
Lockwire - - - - -	14155	1	1	1	1	1	1	1	1	1	1	1	1
GROUP 4-C HAND BRAKE BAND ADJUST PARTS													
Hand Brake Band Adjust Parts													
Bracket - adjusting screw - - - - -	1194332	1	1	1	1	1	1	1	1
Screw - - - - -	120233	2	2	2	2	2	2	2	2
Lockwasher - - - - -	120382	2	2	2	2	2	2	2	2
Bolt - - - - -	634661	1	1
Bolt - exc. 4-speed trans. - - - - -	579186	..	1	1
Bolt - with 4-speed trans. - - - - -	517382	..	1	1
Bolt - - - - -	580048	1	1	1	1	1	1	1	1
Nut - - - - -	120377	1	1
Nut - - - - -	124834	..	2	2	2	2	2	..	2	2	2	2	2
Plainwasher - - - - -	120395	1	1	1	1	1	1	1	1
Spring - - - - -	388302	2	2
Spring - - - - -	566729	..	2	2	2	2	2	..	2	2	2	2	2
Spring - operating - - - - -	580050	1	1	1	1	1	1	1	1
Clevis pin - with 5-speed trans. - - -	657929	1	1	1	1	1	1	1
Cotter - with 5-speed trans. - - - - -	119209	1	1	1	1	1	1	1
Screw - bracket adjusting - - - - -	566990	1	1	1	1	1	1	1	1
Nut - - - - -	120375	2	2	2	2	2	2	2	2
Lockwasher - - - - -	120380	1	1	1	1	1	1	1	1
Guide bolt - - - - -	566990	1	1	1	1
Nut - - - - -	120375	2	2	2	2
Lockwasher - - - - -	120380	1	1	1	1
GROUP 4-D HAND BRAKE PULL ROD													
Hand Brake Pull Rod													
Assembly - - - - -	1271992	1	1	1	1
Pawl - - - - -	1390356	2	2	2	2
Spring - - - - -	1390000	2	2	2	2
Screw - to instrument panel - - - - -	151384	2	2	2	2
Nut - - - - -	1335055	2	2	2	2
Lockwasher - - - - -	1097771	2	2	2	2
Bolt - to dash - - - - -	123473	2	2	2	2
Nut - - - - -	120368	2	2	2	2
Lockwasher - - - - -	1097771	2	2	2	2
Pin - guide - - - - -	1270117	1	1	1	1

Indicates amount used as required.

† Indicates parts included in packages.

GROUP 4 - HAND BRAKE

PART NAME	PART NO.	MODEL CODES											
		DG AND FO					DH AND FP						
		1	2	3	4	5	6	1	2	4	5	6	7
GROUP 4-G HAND BRAKE CABLE (CONT'D)													
Hand Brake Cable (cont'd)													
Assembly - with fluid drive - with 4-speed trans. - note 2	1273029	..	1
Clevis - exc. 4-speed trans.	1272600	1	1	1	1
Clevis - with 4-speed trans. - note 1	1266643	..	1
Clevis - with 4-speed trans. - note 2	1272600	..	1	1
Nut	120368	2	2	2	2
Lockwasher	120214	1	1	1	1
Pin	652970	1	1	1	1
Clip - retaining	1266645	2	2	2	2
Spring - pull back - exc. 4-speed trans.	1272602	1	1	1	1
Spring - pull back - with 4-speed trans. note 1	1088169	..	1
Spring - pull back - with 4-speed trans. note 2	1272602	..	1	1
Extension - exc. 4-speed trans.	1272995	1	1
Extension - less fluid drive - with 4-speed trans.	1311447	..	1
Extension	1311447	1	1
Bracket - to frame	1267619	1	1	1	1
Bolt - L.H.D.	120647	1	1	1	1
Bolt - R.H.D.	121615	1	1	1	1
Nut	120369	1	1	1	1
Lockwasher	120382	1	1	1	1
Bracket - pull back spring - with fluid drive - exc. 4-speed trans.	1272996	1	1	1	1
Bolt	120741	1	1	1	1
Nut	120368	1	1	1	1
Lockwasher	120214	1	1	1	1
Bracket - pull back spring - with fluid drive - with 4-speed trans. - note 5	1273180	..	1
Bracket - pull back spring - with fluid drive - with 4-speed trans. - note 6	1272996	..	1	1
Bolt	123520	..	1	1
Nut	120369	..	1	1
Lockwasher	120382	..	1	1
Clip - bracket	1267620	1	1	1	1
Bolt	120741	1	1	1	1
Nut	120368	1	1	1	1
Lockwasher	120214	1	1	1	1
GROUP 4-H HAND BRAKE OPERATING LEVER													
Hand Brake Operating Lever													
Cam lever	694771	2	2	2	2
Cam lever	556908	2	2	2	2	2	2	2	2
Link - outer	665465	1	1
Link - inner	665464	1	1
Link - except 4-speed trans.	579189	..	1	1
Link - with 4-speed trans.	1194333	..	1	1	1
Link - with trans. case drain plug at rear - exc. 5-speed trans.	1194333	1	1
Link - with trans. case drain plug at right side - exc. 5-speed trans.	1391658	1	1	1	1
Link - left - with 5-speed trans. - note 3	1195483	1	1
Link - right - with 5-speed trans. - note 3	1195482	1	1
Link - with 5-speed trans. - note 4	1272931	1	1	1	1	1	1	1
Stud - with 4-speed trans.	566596	..	1	1	1
Stud - with trans. case drain plug at rear - exc. 5-speed trans.	566596	1	1
Stud - with trans. case drain plug at right side - exc. 5-speed trans.	1391659	1	1	1	1

Indicates amount used as required.

† Indicates parts included in packages.

